

## List of Compatible Device Models

### Multi Monitoring & Control Software 2.2

- As of February 2019 -

In using this software, bear in mind that the items whose settings must be selected for the projectors and the functions that can be used may differ from one projector model to another. While referring to the table below, check out that projector models are compatible with the software before using them.

■ A list of compatible flat panel display models is available for download from the Panasonic website (<https://panasonic.net/cns/prodisplays/download/software/>).

#### List of device models

##### ■ Projector\*1

NTN91000*2	53	PT-DW730	21
NTN91001*2	53	PT-DW740	20
NTN91002*2	52	PT-DW750	11
NTN91003*2	52	PT-DW830	11
PT-D10000*3	23	PT-DW8300	19
PT-D12000	18	PT-DW90XE*3	19
PT-D3500*3	25	PT-DX100	11
PT-D4000	25	PT-DX500	22
PT-D5000	21	PT-DX610	20
PT-D5600*3	25	PT-DX800	21
PT-D5700	25	PT-DX810	20
PT-D6000	21	PT-DX820	11
PT-D7700*3	24	PT-DZ10K	10
PT-DS100XE*3	19	PT-DZ110XE*3	19
PT-DS12K	10	PT-DZ12000	18
PT-DS20K	10	PT-DZ13K	10
PT-DS20K2	9	PT-DZ16K	10
PT-DS8500	19	PT-DZ16K2	9
PT-DW100	18	PT-DZ21K	10
PT-DW10000*3	23	PT-DZ21K2	9
PT-DW105XEA*4	19	PT-DZ570	22
PT-DW11K	10	PT-DZ6700	21
PT-DW17K	10	PT-DZ6710	21
PT-DW17K2	9	PT-DZ680	20
PT-DW5000*3	25	PT-DZ770	20
PT-DW5100	25	PT-DZ780	11
PT-DW530	22	PT-DZ870	11
PT-DW6300	21	PT-DZ8700	19
PT-DW640	20	PT-EW530	29
PT-DW7000*3	24	PT-EW540	26

PT-EW550	27	PT-LB385*4	46
PT-EW551*4	28	PT-LB412	47
PT-EW630	29	PT-LB423	47
PT-EW640	26	PT-LB425	46
PT-EW650	27	PT-LB90NT	50
PT-EW651*4	28	PT-LW25H	49
PT-EW730	26	PT-LW280	48
PT-EX12K	30	PT-LW312	47
PT-EX16K	30	PT-LW330	48
PT-EX500	29	PT-LW333*4	47
PT-EX510*4	26	PT-LW335*4	46
PT-EX520*4	27	PT-LW362	47
PT-EX521*4	28	PT-LW373	47
PT-EX600	29	PT-LW375	46
PT-EX610	26	PT-LX26H	49
PT-EX620	27	PT-LX30H	49
PT-EX621*4	28	PT-LZ370	45
PT-EX800	26	PT-MW530	12
PT-EZ57*4	27	PT-MW630	12
PT-EZ570	29	PT-MW730	12
PT-EZ580	26	PT-MZ570	12
PT-EZ590	27	PT-MZ670	12
PT-EZ591*4	28	PT-MZ770	12
PT-EZ770	26	PT-RQ13K	5
PT-F100NT	44	PT-RQ22K	6
PT-F200NT	44	PT-RQ32K	5
PT-F300	43	PT-RS11K	5
PT-F300NT	43	PT-RS20K	6
PT-FW100NT	44	PT-RS30K	5
PT-FW300	43	PT-RW330	17
PT-FW300NT	43	PT-RW430	16
PT-FW430	42	PT-RW620	7
PT-FW530	28	PT-RW630	8
PT-FX400	42	PT-RW730	7
PT-FX500*4	28	PT-RW930	7
PT-FZ570	28	PT-RX110	7
PT-JW130F*4	53	PT-RZ12K	5
PT-JW130G*4	53	PT-RZ120	6
PT-JW130H*4	53	PT-RZ21K	6
PT-JX200F*4	52	PT-RZ31K	5
PT-JX200G*4	52	PT-RZ370	17
PT-JX200H*4	52	PT-RZ470	16
PT-LB1	51	PT-RZ475	15
PT-LB1V	51	PT-RZ570	14
PT-LB2	51	PT-RZ575	14
PT-LB2V	51	PT-RZ660	7
PT-LB3	51	PT-RZ670	8
PT-LB330	48	PT-RZ770	7
PT-LB332*4	47	PT-RZ870	8
PT-LB353*4	47	PT-RZ970	7
PT-LB355*4	46	PT-ST10	51
PT-LB360	48	PT-TW230	49
PT-LB382	47	PT-TW231R	49
PT-LB383	47	PT-TW250*4	48

PT-TW340*4	48	PT-VX61*4	33
PT-TW341R	48	PT-VX610	33
PT-TW342*4	48	PT-VX615N	31
PT-TW343R	48	PT-VZ470*4	35
PT-TW350*4	47	PT-VZ570*4	34
PT-TW351R	47	PT-VZ575N	32
PT-TW370*4	46	PT-VZ580*4	33
PT-TW371R	46	PT-VZ585N	31
PT-TX310*4	48	PT-VMZ40*4	13
PT-TX312*4	48	PT-VMZ50	13
PT-TX320*4	47	PT-VMW50	13
PT-TX340*4	46	TH-D10000	23
PT-TX400*4	48	TH-D3500	25
PT-TX402*4	48	TH-D5600	25
PT-TX410*4	47	TH-D7700	24
PT-TX430*4	46	TH-DW10000	23
PT-VW330	37	TH-DW5000	25
PT-VW340*4	40	TH-DW7000	24
PT-VW345N	32		
PT-VW350*4	40		
PT-VW355N	32		
PT-VW360	39		
PT-VW430	36		
PT-VW431D	36		
PT-VW435N	38		
PT-VW440	36		
PT-VW530*4	34		
PT-VW535N	32		
PT-VW540*4	33		
PT-VW545N	31		
PT-VX400	37		
PT-VX400NT	38		
PT-VX405*4	36		
PT-VX406*4	41		
PT-VX41	37		
PT-VX410*4	40		
PT-VX415N	32		
PT-VX42*4	40		
PT-VX420*4	40		
PT-VX421*4	41		
PT-VX425N	32		
PT-VX430	39		
PT-VX431K	39		
PT-VX45*4	36		
PT-VX46*4	41		
PT-VX50*4	34		
PT-VX500	36		
PT-VX501*4	36		
PT-VX505N	38		
PT-VX51*4	33		
PT-VX510	36		
PT-VX60*4	34		
PT-VX600*4	34		
PT-VX605N	32		

\*1: Note on model groups

Devices are categorized into one of two groups depending on the type of information that can be accessed from them by the each software of the monitoring, control functions and the early warning function (paid).

The difference in the type of information that can be accessed for “rich information models” and “basic information models” is as follows.

○: Supported    ×: Not supported

Item	Model categorization based on accessible information difference	
	Rich information model	Basic information model
Group Name	○	○
IP Address	○	○
Shutter (AV Mute)	○	○
Model Name	○	○
Serial Number	○*	×
Selected input	○	○
Power	○	○
Selected LIGHT	○*	×
LIGHT Power / Operating mode	○	×
Signal Freq.	○	×
Main Version	○	×
Network Version	○*	×
Power on hours	○	○*
Temperature	○*	×
LIGHT status	○*	○*
Fan status	○*	×

\* May not be accessible depending on the device.

\*2: Model number of product sold in Japan. This will differ for products sold in other regions.

\*3: Model number of product sold in regions other than Japan. This will differ for products sold in Japan.

\*4: Not sold in Japan.

**Notes**

The software is not compatible with any device models not appearing in this “Device model list.”

**Peripheral device list**

■ Peripheral devices

DIGITAL LINK Switcher

ET-YFB200 ..... 54

Network camera

Panasonic BB-S Series, DG-S Series, WV-S Series, AW-UE70 Series, AW-HE130 Series, AW-HE40 Series, and AW-HR140 network cameras are supported. Allows the video shown on a display (projector or flat-panel display) to be checked remotely through a camera.

**Notes**

Models on the “Peripheral device list” only support the early warning function (paid) of this software. They do not support the monitoring and control function.

■ PT-RQ32K / PT-RZ31K / PT-RS30K

■ PT-RQ13K / PT-RZ12K / PT-RS11K

The letters\* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

\* Alphabet letters at end (place of destination: A/D/E/J/T/U/(blank), lens: (blank)/L, cabinet color: B/K/W/(blank))

Model group: **Rich information model**

○: Supported    ×: Not supported    —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards	Not used	
Connection to projector	IP address	Only fixed IP address supported	
	WEB control screen login	User name	admin1*1
		Password	panasonic*2
	Content Manager login	User name	—
		Password	—
Projector settings	Network standby	—	
	Network control		
	WEB control	ON	
	Command control	—	
	WEB port / Command port	1024	
	PJLink control	ON	
	ECO management		
Standby mode	—		
Standby mode		Normal	
Functions	Monitoring and control functions	Auto search (local network) function	○
		Device status monitoring function (Simplified)	○
		Device location information registering function (Map monitoring function)	○
		Command transmission function	○
		Simultaneous image distribution function	×
		Distribution image deletion function	×
		Interrupting delivery function	×
		Brightness control function	○
		ECO management function	×
		Signage schedule acquisition and delivery functions	×
		Maintenance log save function	○
		Contents list delivery function	×
		ECO Power Level Monitor Function	×
		Wireless settings display function	×
	Light ID control function	×	
	Early warning function (paid)	Status monitoring function (Details)	○
		Error, warning, and notification guidance displays function	○
		Basic control functions (power, Shutter / AV muting)	○
		Fan failure prediction function	○
		Filter clog prediction	×
		Maintenance prediction function	○
		Temperature information graph display function	○
		Voltage information graph display function	○
Display of WEB control screen for devices function		○	
System log acquisition (automatic acquisition only when error, warning, or notification occurs)	○		
Stopped camera image detecting function	○		

\*1: This is the user name provided at the time of shipment.

\*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

# PT-RQ22K / PT-RZ21K / PT-RS20K

# PT-RZ120

The letters\* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

\* Alphabet letters at end (place of destination: A/D/E/J/T/U/(blank), lens: (blank)/L, cabinet color: B/K/W/(blank))

Model group: **Rich information model**

○: Supported    ×: Not supported    —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards	Not used	
Connection to projector	IP address	Only fixed IP address supported	
	WEB control screen login	User name	dispadmin* <sup>1</sup>
		Password	@Panasonic* <sup>2</sup>
	Content Manager login	User name	—
		Password	—
Projector settings	Network standby	—	
	Network control		
	WEB control	ON	
	Command control	—	
	WEB port / Command port	1024	
	PJLink control	ON	
	ECO management		
Standby mode	—		
Standby mode		Normal	
Functions	Monitoring and control functions	Auto search (local network) function	○
		Device status monitoring function (Simplified)	○
		Device location information registering function (Map monitoring function)	○
		Command transmission function	○
		Simultaneous image distribution function	×
		Distribution image deletion function	×
		Interrupting delivery function	×
		Brightness control function	○
		ECO management function	×
		Signage schedule acquisition and delivery functions	×
		Maintenance log save function	○
		Contents list delivery function	×
		ECO Power Level Monitor Function	×
		Wireless settings display function	×
	Light ID control function	×	
	Early warning function (paid)	Status monitoring function (Details)	○
		Error, warning, and notification guidance displays function	○
		Basic control functions (power, Shutter / AV muting)	○
		Fan failure prediction function	○
		Filter clog prediction	×
		Maintenance prediction function	○
		Temperature information graph display function	○
		Voltage information graph display function	○
Display of WEB control screen for devices function		○	
Maintenance log acquisition (automatic acquisition only when error, warning, or notification occurs)	○		
Stopped camera image detecting function	○		

\*1: This is the user name provided at the time of shipment.

\*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

**PT-RZ970 / PT-RW930 / PT-RX110 / PT-RZ770 / PT-RW730 / PT-RZ660 / PT-RW620**

The letters\* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

\* Alphabet letters at end (place of destination: A/D/E/J/T/U/(blank), lens: (blank)/L, cabinet color: B/K/W/(blank))

Model group: **Rich information model**

○: Supported    ×: Not supported    —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards	Not used	
Connection to projector	IP address	Only fixed IP address supported	
	WEB control screen login	User name	admin1*1
		Password	panasonic*2
	Content Manager login	User name	—
Password		—	
Projector settings	Network standby	—	
	Network control		
	WEB control	ON	
	Command control	—	
	WEB port / Command port	1024	
	PJLink control	ON	
ECO management			
Standby mode	—		
Standby mode		Normal	
Functions	Monitoring and control functions	Auto search (local network) function	○
		Device status monitoring function (Simplified)	○
		Device location information registering function (Map monitoring function)	○
		Command transmission function	○
		Simultaneous image distribution function	×
		Distribution image deletion function	×
		Interrupting delivery function	×
		Brightness control function	○
		ECO management function	×
		Signage schedule acquisition and delivery functions	×
		Maintenance log save function	○
		Contents list delivery function	×
		ECO Power Level Monitor Function	×
		Wireless settings display function	×
	Light ID control function	×	
	Early warning function (paid)	Status monitoring function (Details)	○
		Error, warning, and notification guidance displays function	○
		Basic control functions (power, Shutter / AV muting)	○
		Fan failure prediction function	○
		Filter clog prediction	×
		Maintenance prediction function	○
		Temperature information graph display function	○
		Voltage information graph display function	×
Display of WEB control screen for devices function		○	
System log acquisition (automatic acquisition only when error, warning, or notification occurs)	○		
Stopped camera image detecting function	○		

\*1: This is the user name provided at the time of shipment.

\*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

■ PT-RZ670 / PT-RW630

■ PT-RZ870

The letters\* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

\* Alphabet letters at end (place of destination: A/D/E/JJ/T/U/(blank), lens: (blank)/L, cabinet color: B/K/W/(blank))

Model group: **Rich information model**

○: Supported    ×: Not supported    —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards	Not used	
Connection to projector	IP address	Only fixed IP address supported	
	WEB control screen login	User name	admin1*1
		Password	panasonic*2
	Content Manager login	User name	—
		Password	—
Projector settings	Network standby	—	
	Network control		
	WEB control	ON	
	Command control	—	
	WEB port / Command port	1024	
	PJLink control	ON	
	ECO management		
Standby mode	—		
Standby mode		Normal	
Functions	Monitoring and control functions	Auto search (local network) function	○
		Device status monitoring function (Simplified)	○
		Device location information registering function (Map monitoring function)	○
		Command transmission function	○
		Simultaneous image distribution function	×
		Distribution image deletion function	×
		Interrupting delivery function	×
		Brightness control function	○
		ECO management function	×
		Signage schedule acquisition and delivery functions	×
		Maintenance log save function	○
		Contents list delivery function	×
		ECO Power Level Monitor Function	×
		Wireless settings display function	×
	Light ID control function	×	
	Early warning function (paid)	Status monitoring function (Details)	○
		Error, warning, and notification guidance displays function	○
		Basic control functions (power, Shutter / AV muting)	○
		Fan failure prediction function	○
		Filter clog prediction	×
		Maintenance prediction function	○
		Temperature information graph display function	○
		Voltage information graph display function	×
Display of WEB control screen for devices function		○	
System log acquisition (automatic acquisition only when error, warning, or notification occurs)	○		
Stopped camera image detecting function	○		

\*1: This is the user name provided at the time of shipment.

\*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.



## PT-DZ21K2 / PT-DS20K2 / PT-DW17K2 / PT-DZ16K2

The letters\* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

\* Alphabet letters at end (place of destination: A/D/E/J/T/U/(blank), lens: (blank)/L, cabinet color: B/K/W/(blank))

Model group: **Rich information model**

○: Supported X: Not supported —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards	Not used	
Connection to projector	IP address	Only fixed IP address supported	
	WEB control screen login	User name	admin1* <sup>1</sup>
		Password	panasonic* <sup>2</sup>
	Content Manager login	User name	—
Password		—	
Projector settings	Network standby	—	
	Network control		
	WEB control	ON	
	Command control	—	
	WEB port / Command port	1024	
	PJLink control	ON	
	ECO management		
Standby mode	—		
Standby mode		Normal	
Functions	Monitoring and control functions	Auto search (local network) function	○
		Device status monitoring function (Simplified)	○
		Device location information registering function (Map monitoring function)	○
		Command transmission function	○
		Simultaneous image distribution function	X
		Distribution image deletion function	X
		Interrupting delivery function	X
		Brightness control function	○
		ECO management function	X
		Signage schedule acquisition and delivery functions	X
		Maintenance log save function	○
		Contents list delivery function	X
		ECO Power Level Monitor Function	X
		Wireless settings display function	X
	Light ID control function	X	
	Early warning function (paid)	Status monitoring function (Details)	○
		Error, warning, and notification guidance displays function	○
		Basic control functions (power, Shutter / AV muting)	○
		Fan failure prediction function	○
		Filter clog prediction	X
		Maintenance prediction function	○
		Temperature information graph display function	○
		Voltage information graph display function	○
Display of WEB control screen for devices function		○	
System log acquisition (automatic acquisition only when error, warning, or notification occurs)	○		
Stopped camera image detecting function	○		

\*1: This is the user name provided at the time of shipment.

\*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

■ PT-DZ21K / PT-DS20K / PT-DW17K / PT-DZ16K

■ PT-DZ13K / PT-DS12K / PT-DW11K / PT-DZ10K

The letters\* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

\* Alphabet letters at end (place of destination: A/D/E/J/T/U/(blank), lens: (blank)/L, cabinet color: B/K/W/(blank))

Model group: **Rich information model**

○: Supported    ×: Not supported    —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards	Not used	
Connection to projector	IP address	Only fixed IP address supported	
	WEB control screen login	User name	admin1*1
		Password	panasonic*2
	Content Manager login	User name	—
Password		—	
Projector settings	Network standby	—	
	Network control		
	WEB control	ON	
	Command control	—	
	WEB port / Command port	1024	
	PJLink control	ON	
	ECO management		
Standby mode	—		
Standby mode		Normal	
Functions	Monitoring and control functions	Auto search (local network) function	○
		Device status monitoring function (Simplified)	○
		Device location information registering function (Map monitoring function)	○
		Command transmission function	○
		Simultaneous image distribution function	×
		Distribution image deletion function	×
		Interrupting delivery function	×
		Brightness control function	○
		ECO management function	×
		Signage schedule acquisition and delivery functions	×
		Maintenance log save function	○
		Contents list delivery function	×
		ECO Power Level Monitor Function	×
		Wireless settings display function	×
	Light ID control function	×	
	Early warning function (paid)	Status monitoring function (Details)	○
		Error, warning, and notification guidance displays function	○
		Basic control functions (power, Shutter / AV muting)	○
		Fan failure prediction function	○
		Filter clog prediction	×
		Maintenance prediction function	○
		Temperature information graph display function	○
		Voltage information graph display function	×
Display of WEB control screen for devices function		○	
System log acquisition (automatic acquisition only when error, warning, or notification occurs)	○		
Stopped camera image detecting function	○		

\*1: This is the user name provided at the time of shipment.

\*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

■ PT-DZ870 / PT-DW830 / PT-DX100

■ PT-DZ780 / PT-DW750 / PT-DX820

The letters\* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

\* Alphabet letters at end (place of destination: A/D/E/J/T/U/(blank), lens: (blank)/L, cabinet color: B/K/W/(blank))

Model group: **Rich information model**

○: Supported    ×: Not supported    —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards	Not used	
Connection to projector	IP address	Only fixed IP address supported	
	WEB control screen login	User name	admin1*1
		Password	panasonic*2
	Content Manager login	User name	—
Password		—	
Projector settings	Network standby	—	
	Network control		
	WEB control	ON	
	Command control	—	
	WEB port / Command port	1024	
	PJLink control	ON	
	ECO management		
Standby mode	—		
Standby mode		Normal	
Functions	Monitoring and control functions	Auto search (local network) function	○
		Device status monitoring function (Simplified)	○
		Device location information registering function (Map monitoring function)	○
		Command transmission function	○
		Simultaneous image distribution function	×
		Distribution image deletion function	×
		Interrupting delivery function	×
		Brightness control function	○
		ECO management function	×
		Signage schedule acquisition and delivery functions	×
		Maintenance log save function	○
		Contents list delivery function	×
		ECO Power Level Monitor Function	×
		Wireless settings display function	×
	Light ID control function	×	
	Early warning function (paid)	Status monitoring function (Details)	○
		Error, warning, and notification guidance displays function	○
		Basic control functions (power, Shutter / AV muting)	○
		Fan failure prediction function	○
		Filter clog prediction	×
		Maintenance prediction function	○
		Temperature information graph display function	○
		Voltage information graph display function	×
Display of WEB control screen for devices function		○	
System log acquisition (automatic acquisition only when error, warning, or notification occurs)	○		
Stopped camera image detecting function	○		

\*1: This is the user name provided at the time of shipment.

\*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

■ PT-MZ670 / PT-MW630 / PT-MZ570 / PT-MW530

■ PT-MZ770 / PT-MW730

The letters\* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

\* Alphabet letters at end (place of destination: A/D/J/(blank), lens: (blank)/L, cabinet color: (blank))

Model group: **Rich information model**

○: Supported X: Not supported —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards	Not used	
Connection to projector	IP address	Only fixed IP address supported	
	WEB control screen login	User name	dispadmin*1
		Password	@Panasonic*2
	Content Manager login	User name	—
		Password	—
Projector settings	Network standby	—	
	Network control		
	WEB control	ON	
	Command control	—	
	WEB port / Command port	1024	
	PJLink control	ON	
	ECO management		
Standby mode	—		
Standby mode		Normal	
Functions	Monitoring and control functions	Auto search (local network) function	○
		Device status monitoring function (Simplified)	○
		Device location information registering function (Map monitoring function)	○
		Command transmission function	○
		Simultaneous image distribution function	○
		Distribution image deletion function	○
		Interrupting delivery function	X
		Brightness control function	X
		ECO management function	○
		Signage schedule acquisition and delivery functions	X
		Maintenance log save function	○
		Contents list delivery function	○
		ECO Power Level Monitor Function	X
		Wireless settings display function	○*3
	Light ID control function	○	
	Early warning function (paid)	Status monitoring function (Details)	○
		Error, warning, and notification guidance displays function	○
		Basic control functions (power, Shutter / AV muting)	○
		Fan failure prediction function	○
		Filter clog prediction	X
		Maintenance prediction function	○
		Temperature information graph display function	○
		Voltage information graph display function	X
Display of WEB control screen for devices function		○	
Maintenance log acquisition (automatic acquisition only when error, warning, or notification occurs)		○	
Stopped camera image detecting function	○		

\*1: This is the user name provided at the time of shipment.

\*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

\*3: Optional wireless module (ET-WM300) is required.

## PT-VMZ50 / PT-VMZ40 / PT-VMW50

The letters\* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

\* Alphabet letters at end (place of destination: D/J/T/(blank))

Model group: **Rich information model**

○: Supported    ×: Not supported    —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards	Not used	
Connection to projector	IP address	Only fixed IP address supported	
	WEB control screen login	User name	dispadmin* <sup>1</sup>
		Password	@Panasonic* <sup>2</sup>
	Content Manager login	User name	—
Password		—	
Projector settings	Network standby	—	
	Network control		
	WEB control	ON	
	Command control	—	
	WEB port / Command port	—	
	PJLink control	ON	
	ECO management		
Standby mode	—		
Standby mode		Normal	
Functions	Monitoring and control functions	Auto search (local network) function	○
		Device status monitoring function (Simplified)	○
		Device location information registering function (Map monitoring function)	○
		Command transmission function	○
		Simultaneous image distribution function	×
		Distribution image deletion function	×
		Interrupting delivery function	×
		Brightness control function	×
		ECO management function	○
		Signage schedule acquisition and delivery functions	×
		Maintenance log save function	○
		Contents list delivery function	×
		ECO Power Level Monitor Function	×
		Wireless settings display function	×
	Light ID control function	×	
	Early warning function (paid)	Status monitoring function (Details)	○
		Error, warning, and notification guidance displays function	○
		Basic control functions (power, Shutter / AV muting)	○
		Fan failure prediction function	○
		Filter clog prediction	×
		Maintenance prediction function	○
		Temperature information graph display function	○
		Voltage information graph display function	×
Display of WEB control screen for devices function		○	
System log acquisition (automatic acquisition only when error, warning, or notification occurs)	○		
Stopped camera image detecting function	○		

\*1: This is the user name provided at the time of shipment.

\*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

## PT-RZ575 / PT-RZ570

The letters\* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

\* Alphabet letters at end (place of destination: A/D/J/T/(blank), cabinet color: B/W)

Model group: **Rich information model**

○: Supported    ×: Not supported    —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards	Not used	
Connection to projector	IP address	Only fixed IP address supported	
	WEB control screen login	User name	admin1*1
		Password	panasonic*2
	Content Manager login	User name	—
Password		—	
Projector settings	Network standby	—	
	Network control		
	WEB control	ON	
	Command control	—	
	WEB port / Command port	—	
	PJLink control	ON	
ECO management			
Standby mode	—		
Standby mode		Normal	
Functions	Monitoring and control functions	Auto search (local network) function	○
		Device status monitoring function (Simplified)	○
		Device location information registering function (Map monitoring function)	○
		Command transmission function	○
		Simultaneous image distribution function	×
		Distribution image deletion function	×
		Interrupting delivery function	×
		Brightness control function	○
		ECO management function	○
		Signage schedule acquisition and delivery functions	×
		Maintenance log save function	○
		Contents list delivery function	×
		ECO Power Level Monitor Function	×
		Wireless settings display function	×
	Light ID control function	×	
	Early warning function (paid)	Status monitoring function (Details)	○
		Error, warning, and notification guidance displays function	○
		Basic control functions (power, Shutter / AV muting)	○
		Fan failure prediction function	○
		Filter clog prediction	×
		Maintenance prediction function	○
		Temperature information graph display function	○
		Voltage information graph display function	×
Display of WEB control screen for devices function		○	
System log acquisition (automatic acquisition only when error, warning, or notification occurs)	○		
Stopped camera image detecting function	○		

\*1: This is the user name provided at the time of shipment.

\*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

# PT-RZ475

The letters\* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

\* Alphabet letters at end (place of destination: E/EA/U/(blank))

Model group: **Rich information model**

○: Supported    ×: Not supported    —: Not available

		Setting / compatibility		
Optional accessories	Expansion boards		Not used	
Connection to projector	IP address		Only fixed IP address supported	
	WEB control screen login	User name	admin1*1	
		Password	panasonic*2	
	Content Manager login	User name	—	
Password		—		
Projector settings	Network standby		—	
	Network control			
		WEB control	ON	
		Command control	—	
		WEB port / Command port	—	
		PJLink control	ON	
Functions	ECO management			
		Standby mode	—	
	Standby mode		Normal	
	Monitoring and control functions	Auto search (local network) function		○
		Device status monitoring function (Simplified)		○
		Device location information registering function (Map monitoring function)		○
		Command transmission function		○
		Simultaneous image distribution function		×
		Distribution image deletion function		×
		Interrupting delivery function		×
		Brightness control function		○*3
		ECO management function		○
		Signage schedule acquisition and delivery functions		×
		Maintenance log save function		○
		Contents list delivery function		×
ECO Power Level Monitor Function		×		
Wireless settings display function		×		
Light ID control function		×		
Early warning function (paid)	Status monitoring function (Details)		○	
	Error, warning, and notification guidance displays function		○	
	Basic control functions (power, Shutter / AV muting)		○	
	Fan failure prediction function		×	
	Filter clog prediction		×	
	Maintenance prediction function		○	
	Temperature information graph display function		○	
	Voltage information graph display function		×	
	Display of WEB control screen for devices function		○	
	System log acquisition (automatic acquisition only when error, warning, or notification occurs)		○	
Stopped camera image detecting function		○		

\*1: This is the user name provided at the time of shipment.

\*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

\*3: If the temperature of the projector's surroundings is elevated, light output may be reduced in order to protect the projector unit. If this software is used for the brightness control of multiple projectors, please ensure that as far as possible the temperature of the surroundings is the same for all projectors.

## PT-RZ470 / PT-RW430

The letters\* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

\* Alphabet letters at end (place of destination: E/EA/U/(blank), cabinet color: K/W/(blank))

Model group: **Rich information model**

○: Supported X: Not supported —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards	Not used	
Connection to projector	IP address	Only fixed IP address supported	
	WEB control screen login	User name	admin1* <sup>1</sup>
		Password	panasonic* <sup>2</sup>
	Content Manager login	User name	—
Password		—	
Projector settings	Network standby	—	
	Network control		
	WEB control	ON	
	Command control	—	
	WEB port / Command port	—	
	PJLink control	ON	
ECO management			
	Standby mode	—	
	Standby mode	Normal	
Functions	Monitoring and control functions	Auto search (local network) function	○
		Device status monitoring function (Simplified)	○
		Device location information registering function (Map monitoring function)	○
		Command transmission function	○
		Simultaneous image distribution function	X
		Distribution image deletion function	X
		Interrupting delivery function	X
		Brightness control function	○* <sup>3</sup>
		ECO management function	○
		Signage schedule acquisition and delivery functions	X
		Maintenance log save function	○
		Contents list delivery function	X
		ECO Power Level Monitor Function	○
		Wireless settings display function	X
	Light ID control function	X	
	Early warning function (paid)	Status monitoring function (Details)	○
		Error, warning, and notification guidance displays function	○
		Basic control functions (power, Shutter / AV muting)	○
		Fan failure prediction function	X
		Filter clog prediction	X
		Maintenance prediction function	○
		Temperature information graph display function	○
		Voltage information graph display function	X
Display of WEB control screen for devices function		○	
System log acquisition (automatic acquisition only when error, warning, or notification occurs)	○		
Stopped camera image detecting function	○		

\*1: This is the user name provided at the time of shipment.

\*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

\*3: If the temperature of the projector's surroundings is elevated, light output may be reduced in order to protect the projector unit. If this software is used for the brightness control of multiple projectors, please ensure that as far as possible the temperature of the surroundings is the same for all projectors.



## PT-RZ370 / PT-RW330

The letters\* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

\* Alphabet letters at end (place of destination: E/EA/U/(blank))

Model group: **Rich information model**

○: Supported    ×: Not supported    —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards	Not used	
Connection to projector	IP address	Only fixed IP address supported	
	WEB control screen login	User name	admin1* <sup>1</sup>
		Password	panasonic* <sup>2</sup>
	Content Manager login	User name	—
Password		—	
Projector settings	Network standby	—	
	Network control		
	WEB control	ON	
	Command control	—	
	WEB port / Command port	—	
	PJLink control	ON	
ECO management			
Standby mode	—		
Standby mode		Normal	
Functions	Monitoring and control functions	Auto search (local network) function	×
		Device status monitoring function (Simplified)	○
		Device location information registering function (Map monitoring function)	○
		Command transmission function	○
		Simultaneous image distribution function	×
		Distribution image deletion function	×
		Interrupting delivery function	×
		Brightness control function	×
		ECO management function	○
		Signage schedule acquisition and delivery functions	×
		Maintenance log save function	○
		Contents list delivery function	×
		ECO Power Level Monitor Function	○
		Wireless settings display function	×
	Light ID control function	×	
	Early warning function (paid)	Status monitoring function (Details)	○
		Error, warning, and notification guidance displays function	○
		Basic control functions (power, Shutter / AV muting)	○
		Fan failure prediction function	×
		Filter clog prediction	×
Maintenance prediction function		○	
Temperature information graph display function		○	
Voltage information graph display function		×	
Display of WEB control screen for devices function	○		
System log acquisition (automatic acquisition only when error, warning, or notification occurs)	○		
Stopped camera image detecting function	○		

\*1: This is the user name provided at the time of shipment.

\*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

# PT-DZ12000 / PT-D12000 / PT-DW100

The letters\* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

\* Alphabet letters at end (place of destination: E/U/(blank))

Model group: **Rich information model**

○: Supported    ×: Not supported    —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards	Not required (LAN terminal installed)*1	
Connection to projector	IP address	Only fixed IP address supported	
	WEB control screen login	User name	admin1*2
		Password	panasonic*3
	Content Manager login	User name	—
Password		—	
Projector settings	Network standby	ON	
	Network control		
	WEB control	ON	
	Command control	—	
	WEB port / Command port	1024	
	PJLink control	ON	
	ECO management		
Standby mode	—		
	Standby mode	—	
Functions	Monitoring and control functions	Auto search (local network) function	×
		Device status monitoring function (Simplified)	○
		Device location information registering function (Map monitoring function)	○
		Command transmission function	○
		Simultaneous image distribution function	×
		Distribution image deletion function	×
		Interrupting delivery function	×
		Brightness control function	×
		ECO management function	×
		Signage schedule acquisition and delivery functions	×
		Maintenance log save function	○
		Contents list delivery function	×
		ECO Power Level Monitor Function	×
	Wireless settings display function	×	
	Light ID control function	×	
	Early warning function (paid)	Status monitoring function (Details)	○
		Error, warning, and notification guidance displays function	○
		Basic control functions (power, Shutter / AV muting)	○
		Fan failure prediction function	×
		Filter clog prediction	×
		Maintenance prediction function	○
		Temperature information graph display function	○
		Voltage information graph display function	×
Display of WEB control screen for devices function		○	
System log acquisition (automatic acquisition only when error, warning, or notification occurs)		○	
Stopped camera image detecting function	○		

\*1: Of the commercially available expansion boards, the ET-MD77NT network board is not supported.  
With expansion boards other than the ET-MD77NT, the network function on the expansion board side cannot be used (DVI, SDI, and other inputs are enabled).  
The ET-MD100SD4 digital signal input board (for dual link HD-SDI) is supported.

\*2: This is the user name provided at the time of shipment.

\*3: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

**PT-DZ8700 / PT-DS8500 / PT-DW8300 / PT-DZ110XE / PT-DS100XE / PT-DW90XE / PT-DW105XEA**

The letters\* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

\* Alphabet letters at end (place of destination: E/U/(blank))

Model group: **Rich information model**

○: Supported    ×: Not supported    —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards	Not used	
Connection to projector	IP address	Only fixed IP address supported	
	WEB control screen login	User name	admin1* <sup>1</sup>
		Password	panasonic* <sup>2</sup>
	Content Manager login	User name	—
		Password	—
Projector settings	Network standby	—	
	Network control		
	WEB control	ON	
	Command control	—	
	WEB port / Command port	—	
	PJLink control	ON	
	ECO management		
Standby mode	—		
Functions	Standby mode	Normal	
	Monitoring and control functions	Auto search (local network) function	○
		Device status monitoring function (Simplified)	○
		Device location information registering function (Map monitoring function)	○
		Command transmission function	○
		Simultaneous image distribution function	×
		Distribution image deletion function	×
		Interrupting delivery function	×
		Brightness control function	○
		ECO management function	×
		Signage schedule acquisition and delivery functions	×
		Maintenance log save function	○
		Contents list delivery function	×
		ECO Power Level Monitor Function	×
		Wireless settings display function	×
	Light ID control function	×	
	Early warning function (paid)	Status monitoring function (Details)	○
		Error, warning, and notification guidance displays function	○
		Basic control functions (power, Shutter / AV muting)	○
		Fan failure prediction function	○
		Filter clog prediction	×
		Maintenance prediction function	○
		Temperature information graph display function	○
Voltage information graph display function		×	
Display of WEB control screen for devices function		○	
System log acquisition (automatic acquisition only when error, warning, or notification occurs)		○	
Stopped camera image detecting function	○		

\*1: This is the user name provided at the time of shipment.

\*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

■ PT-DZ770 / PT-DW740 / PT-DX810

■ PT-DZ680 / PT-DW640 / PT-DX610

The letters\* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

\* Alphabet letters at end (place of destination: E/U/(blank), cabinet color: K/S/(blank), lens: (blank)/L)

Model group: **Rich information model**

○: Supported X: Not supported —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards	Not used	
Connection to projector	IP address	Only fixed IP address supported	
	WEB control screen login	User name	admin1*1
		Password	panasonic*2
	Content Manager login	User name	—
Password		—	
Projector settings	Network standby	—	
	Network control		
	WEB control	ON	
	Command control	—	
	WEB port / Command port	—	
	PJLink control	ON	
	ECO management		
Standby mode	—		
Standby mode		Normal	
Functions	Monitoring and control functions	Auto search (local network) function	X
		Device status monitoring function (Simplified)	○
		Device location information registering function (Map monitoring function)	○
		Command transmission function	○
		Simultaneous image distribution function	X
		Distribution image deletion function	X
		Interrupting delivery function	X
		Brightness control function	X
		ECO management function	X
		Signage schedule acquisition and delivery functions	X
		Maintenance log save function	○
		Contents list delivery function	X
		ECO Power Level Monitor Function	X
		Wireless settings display function	X
	Light ID control function	X	
	Early warning function (paid)	Status monitoring function (Details)	○
		Error, warning, and notification guidance displays function	○
		Basic control functions (power, Shutter / AV muting)	○
		Fan failure prediction function	○
		Filter clog prediction	X
		Maintenance prediction function	○
		Temperature information graph display function	○
		Voltage information graph display function	X
Display of WEB control screen for devices function		○	
System log acquisition (automatic acquisition only when error, warning, or notification occurs)		○	
Stopped camera image detecting function	○		

\*1: This is the user name provided at the time of shipment.

\*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

■ PT-DZ6710 / PT-DZ6700 / PT-DW6300 / PT-D6000 / PT-D5000

■ PT-DW730 / PT-DX800

The letters\* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

\* Alphabet letters at end (place of destination: E/U/(blank), cabinet color: K/S/(blank), lens: (blank)/L)

Model group: **Rich information model**

○: Supported X: Not supported —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards	Not used	
Connection to projector	IP address	Only fixed IP address supported	
	WEB control screen login	User name	admin1*1
		Password	panasonic*2
	Content Manager login	User name	—
		Password	—
Projector settings	Network standby	—	
	Network control		
	WEB control	ON	
	Command control	—	
	WEB port / Command port	—	
	PJLink control	ON	
	ECO management		
Standby mode	—		
Standby mode		Normal	
Functions	Monitoring and control functions	Auto search (local network) function	X
		Device status monitoring function (Simplified)	○
		Device location information registering function (Map monitoring function)	○
		Command transmission function	○
		Simultaneous image distribution function	X
		Distribution image deletion function	X
		Interrupting delivery function	X
		Brightness control function	X
		ECO management function	X
		Signage schedule acquisition and delivery functions	X
		Maintenance log save function	○
		Contents list delivery function	X
		ECO Power Level Monitor Function	X
		Wireless settings display function	X
	Light ID control function	X	
	Early warning function (paid)	Status monitoring function (Details)	○
		Error, warning, and notification guidance displays function	○
		Basic control functions (power, Shutter / AV muting)	○
		Fan failure prediction function	○
		Filter clog prediction	X
		Maintenance prediction function	○
		Temperature information graph display function	○
		Voltage information graph display function	X
Display of WEB control screen for devices function		○	
System log acquisition (automatic acquisition only when error, warning, or notification occurs)	○		
Stopped camera image detecting function	○		

\*1: This is the user name provided at the time of shipment.

\*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

## PT-DZ570 / PT-DW530 / PT-DX500

The letters\* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

\* Alphabet letters at end (place of destination: E/U/(blank))

Model group: **Rich information model**

○: Supported    ×: Not supported    —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards	Not used	
Connection to projector	IP address	Only fixed IP address supported	
	WEB control screen login	User name	admin1* <sup>1</sup>
		Password	panasonic* <sup>2</sup>
	Content Manager login	User name	—
Password		—	
Projector settings	Network standby	—	
	Network control		
	WEB control	ON	
	Command control	—	
	WEB port / Command port	—	
	PJLink control	ON	
ECO management			
Standby mode	—		
Standby mode		Normal	
Functions	Monitoring and control functions	Auto search (local network) function	○
		Device status monitoring function (Simplified)	○
		Device location information registering function (Map monitoring function)	○
		Command transmission function	○
		Simultaneous image distribution function	○
		Distribution image deletion function	○
		Interrupting delivery function	×
		Brightness control function	×
		ECO management function	×
		Signage schedule acquisition and delivery functions	×
		Maintenance log save function	○
		Contents list delivery function	×
		ECO Power Level Monitor Function	×
		Wireless settings display function	×
	Light ID control function	×	
	Early warning function (paid)	Status monitoring function (Details)	○
		Error, warning, and notification guidance displays function	○
		Basic control functions (power, Shutter / AV muting)	○
		Fan failure prediction function	×
		Filter clog prediction	×
		Maintenance prediction function	○
		Temperature information graph display function	○
		Voltage information graph display function	×
Display of WEB control screen for devices function		○	
System log acquisition (automatic acquisition only when error, warning, or notification occurs)	○		
Stopped camera image detecting function	○		

\*1: This is the user name provided at the time of shipment.

\*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

# TH-DW10000 / TH-D10000 / PT-DW10000 / PT-D10000

The letters\* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

\* Alphabet letters at end (place of destination: E/U)

Model group: **Rich information model**

○: Supported    ×: Not supported    —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards	Not required (LAN terminal installed)*1	
Connection to projector	IP address	Only fixed IP address supported	
	WEB control screen login	User name	user1
		Password	panasonic*2
	Content Manager login	User name	—
Password		—	
Projector settings	Network standby	—	
	Network control		
	WEB control	—	
	Command control	—	
	WEB port / Command port	—	
	PJLink control	—	
	ECO management		
Standby mode	—		
Standby mode	—		
Functions	Monitoring and control functions	Auto search (local network) function	×
		Device status monitoring function (Simplified)	○
		Device location information registering function (Map monitoring function)	○
		Command transmission function	○
		Simultaneous image distribution function	×
		Distribution image deletion function	×
		Interrupting delivery function	×
		Brightness control function	×
		ECO management function	×
		Signage schedule acquisition and delivery functions	×
		Maintenance log save function	×
		Contents list delivery function	×
		ECO Power Level Monitor Function	×
		Wireless settings display function	×
	Light ID control function	×	
	Early warning function (paid)	Status monitoring function (Details)	○
		Error, warning, and notification guidance displays function	○
		Basic control functions (power, Shutter / AV muting)	○
		Fan failure prediction function	×
		Filter clog prediction	×
		Maintenance prediction function	○
		Temperature information graph display function	○
		Voltage information graph display function	×
Display of WEB control screen for devices function		○	
System log acquisition (automatic acquisition only when error, warning, or notification occurs)	×		
Stopped camera image detecting function	○		

\*1: Of the commercially available expansion boards, the ET-MD77NT network board is not supported.

With expansion boards other than the ET-MD77NT, the network function on the expansion board side cannot be used (DVI, SDI, and other inputs are enabled).

The ET-MD100SD4 digital signal input board (for dual link HD-SDI) is supported. (except for TH-D10000 and PT-D10000)

\*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

# TH-D7700 / TH-DW7000 / PT-D7700 / PT-DW7000

The letters\* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

\* Alphabet letters at end (place of destination: E/U, cabinet color: K/(blank))

Model group: **Rich information model**

○: Supported    ×: Not supported    —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards		Expansion board required*1
Connection to projector	IP address		Only fixed IP address supported
	WEB control screen login	User name	user1
		Password	panasonic*2
	Content Manager login	User name	—
Password		—	
Projector settings	Network standby		—
	Network control		
		WEB control	—
		Command control	—
		WEB port / Command port	—
		PJLink control	—
	ECO management		
		Standby mode	—
	Standby mode		—
Functions	Monitoring and control functions	Auto search (local network) function	×
		Device status monitoring function (Simplified)	○
		Device location information registering function (Map monitoring function)	○
		Command transmission function	○
		Simultaneous image distribution function	×
		Distribution image deletion function	×
		Interrupting delivery function	×
		Brightness control function	×
		ECO management function	×
		Signage schedule acquisition and delivery functions	×
		Maintenance log save function	×
		Contents list delivery function	×
		ECO Power Level Monitor Function	×
	Wireless settings display function	×	
	Light ID control function	×	
	Early warning function (paid)	Status monitoring function (Details)	○
		Error, warning, and notification guidance displays function	○
		Basic control functions (power, Shutter / AV muting)	○
		Fan failure prediction function	×
		Filter clog prediction	×
Maintenance prediction function		○	
Temperature information graph display function		○	
Voltage information graph display function		×	
Display of WEB control screen for devices function	○		
	System log acquisition (automatic acquisition only when error, warning, or notification occurs)	×	
	Stopped camera image detecting function	○	

\*1: One of the following commercially available expansion boards with a network function is required.

Network board: ET-MD77NT

Digital signal input board (for SD-SDI): ET-MD77SD1

Digital signal input board (for HD-SDI): ET-MD77SD3

Digital signal input board (for DVI): ET-MD77DV

\*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.



■ PT-D5700 / PT-D4000 / PT-DW5100

■ TH-D5600 / PT-D5600 / TH-DW5000 / PT-DW5000

■ TH-D3500 / PT-D3500

The letters\* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

\* Alphabet letters at end (place of destination: E/U/(blank), lens: (blank)/L)

Model group: **Rich information model**

○: Supported    ×: Not supported    —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards	Not used	
Connection to projector	IP address	Only fixed IP address supported	
	WEB control screen login	User name	user1
		Password	panasonic*1
	Content Manager login	User name	—
Password		—	
Projector settings	Network standby	—	
	Network control		
	WEB control	—	
	Command control	—	
	WEB port / Command port	—	
	PJLink control	—	
ECO management			
	Standby mode	—	
	Standby mode	—	
Functions	Monitoring and control functions	Auto search (local network) function	×
		Device status monitoring function (Simplified)	○
		Device location information registering function (Map monitoring function)	○
		Command transmission function	○
		Simultaneous image distribution function	×
		Distribution image deletion function	×
		Interrupting delivery function	×
		Brightness control function	×
		ECO management function	×
		Signage schedule acquisition and delivery functions	×
		Maintenance log save function	×
		Contents list delivery function	×
		ECO Power Level Monitor Function	×
	Early warning function (paid)	Wireless settings display function	×
		Light ID control function	×
		Status monitoring function (Details)	○
		Error, warning, and notification guidance displays function	○
		Basic control functions (power, Shutter / AV muting)	○
		Fan failure prediction function	×
		Filter clog prediction	×
Maintenance prediction function	○		
Temperature information graph display function	○		
Voltage information graph display function	×		
Display of WEB control screen for devices function	○		
System log acquisition (automatic acquisition only when error, warning, or notification occurs)	×		
Stopped camera image detecting function	○		

\*1: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

■ PT-EZ770 / PT-EW730 / PT-EX800

■ PT-EZ580 / PT-EW640 / PT-EW540 / PT-EX610 / PT-EX510

The letters\* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

\* Alphabet letters at end (place of destination: A/D/J/K/T/Z/(blank), lens: (blank)/L)

Model group: **Rich information model**

○: Supported    ×: Not supported    —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards	Not used	
Connection to projector	IP address	Only fixed IP address supported	
	WEB control screen login	User name	admin1*1
		Password	panasonic*2
	Content Manager login	User name	—
		Password	—
Projector settings	Network standby	—	
	Network control		
	WEB control	ON	
	Command control	—	
	WEB port / Command port	—	
	PJLink control	ON	
	ECO management		
Standby mode	—		
Standby mode		Normal	
Functions	Monitoring and control functions	Auto search (local network) function	×
		Device status monitoring function (Simplified)	○
		Device location information registering function (Map monitoring function)	○
		Command transmission function	○
		Simultaneous image distribution function	×
		Distribution image deletion function	×
		Interrupting delivery function	×
		Brightness control function	×
		ECO management function	○
		Signage schedule acquisition and delivery functions	×
		Maintenance log save function	○
		Contents list delivery function	×
		ECO Power Level Monitor Function	×
		Wireless settings display function	×
	Light ID control function	×	
	Early warning function (paid)	Status monitoring function (Details)	○
		Error, warning, and notification guidance displays function	○
		Basic control functions (power, Shutter / AV muting)	○
		Fan failure prediction function	○
		Filter clog prediction	×
		Maintenance prediction function	○
		Temperature information graph display function	○
		Voltage information graph display function	×
Display of WEB control screen for devices function		○	
System log acquisition (automatic acquisition only when error, warning, or notification occurs)	○		
Stopped camera image detecting function	○		

\*1: This is the user name provided at the time of shipment.

\*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

**PT-EZ590\*3 / PT-EW650\*3 / PT-EW550\*3 / PT-EX620\*3 / PT-EX520\*3 / PT-EZ57\*3**

The letters\* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

\* Alphabet letters at end (place of destination: D/J/K/T/(blank), lens: (blank)/L)

Model group: **Rich information model**

○: Supported    ×: Not supported    —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards	Not used	
Connection to projector	IP address	Only fixed IP address supported	
	WEB control screen login	User name	admin1*1
		Password	panasonic*2
	Content Manager login	User name	—
Password		—	
Projector settings	Network standby	—	
	Network control		
	WEB control	ON	
	Command control	—	
	WEB port / Command port	—	
	PJLink control	ON	
ECO management			
Standby mode	—		
Standby mode		Normal	
Functions	Monitoring and control functions	Auto search (local network) function	×
		Device status monitoring function (Simplified)	○
		Device location information registering function (Map monitoring function)	○
		Command transmission function	○
		Simultaneous image distribution function	×
		Distribution image deletion function	×
		Interrupting delivery function	×
		Brightness control function	×
		ECO management function	○
		Signage schedule acquisition and delivery functions	×
		Maintenance log save function	○
		Contents list delivery function	×
		ECO Power Level Monitor Function	×
		Wireless settings display function	×
	Light ID control function	×	
	Early warning function (paid)	Status monitoring function (Details)	○
		Error, warning, and notification guidance displays function	○
		Basic control functions (power, Shutter / AV muting)	○
		Fan failure prediction function	○
		Filter clog prediction	×
Maintenance prediction function		○	
Temperature information graph display function		○	
Voltage information graph display function		×	
Display of WEB control screen for devices function	○		
System log acquisition (automatic acquisition only when error, warning, or notification occurs)	○		
Stopped camera image detecting function	○		

\*1: This is the user name provided at the time of shipment.

\*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

\*3: Devices for which the main microcomputer version is below Ver.1.08 do not support the early warning function. You can check the version on the following page as [Projector Information] --> [Main Version] in the WEB control screen.

■ PT-EZ591 / PT-EW651 / PT-EW551 / PT-EX621 / PT-EX521

■ PT-FZ570\*3 / PT-FW530\*3 / PT-FX500\*3

The letters\* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

\* Alphabet letters at end (place of destination: D/J/K/T/(blank), lens: (blank)/L)

Model group: **Rich information model**

○: Supported    ×: Not supported    —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards	Not used	
Connection to projector	IP address	Only fixed IP address supported	
	WEB control screen login	User name	admin1*1
		Password	panasonic*2
	Content Manager login	User name	—
		Password	—
Projector settings	Network standby	—	
	Network control		
	WEB control	ON	
	Command control	—	
	WEB port / Command port	—	
	PJLink control	ON	
	ECO management		
Standby mode	—		
Standby mode		Normal	
Functions	Monitoring and control functions	Auto search (local network) function	×
		Device status monitoring function (Simplified)	○
		Device location information registering function (Map monitoring function)	○
		Command transmission function	○
		Simultaneous image distribution function	×
		Distribution image deletion function	×
		Interrupting delivery function	×
		Brightness control function	×
		ECO management function	○
		Signage schedule acquisition and delivery functions	×
		Maintenance log save function	○
		Contents list delivery function	×
		ECO Power Level Monitor Function	×
		Wireless settings display function	×
	Light ID control function	×	
	Early warning function (paid)	Status monitoring function (Details)	○
		Error, warning, and notification guidance displays function	○
		Basic control functions (power, Shutter / AV muting)	○
		Fan failure prediction function	○
		Filter clog prediction	×
		Maintenance prediction function	○
		Temperature information graph display function	○
		Voltage information graph display function	×
Display of WEB control screen for devices function		○	
System log acquisition (automatic acquisition only when error, warning, or notification occurs)	○		
Stopped camera image detecting function	○		

\*1: This is the user name provided at the time of shipment.

\*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

\*3: Devices for which the main microcomputer version is below Ver.1.08 do not support the early warning function. You can check the version on the following page as [Projector Information] --> [Main Version] in the WEB control screen.

# PT-EZ570 / PT-EW630 / PT-EW530 / PT-EX600 / PT-EX500

The letters\* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

\* Alphabet letters at end (place of destination: E/EA/U/(blank))

Model group: **Rich information model**

○: Supported    ×: Not supported    —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards	Not used	
Connection to projector	IP address	Only fixed IP address supported	
	WEB control screen login	User name	admin1* <sup>1</sup>
		Password	panasonic* <sup>2</sup>
	Content Manager login	User name	—
Password		—	
Projector settings	Network standby	—	
	Network control		
	WEB control	ON	
	Command control	—	
	WEB port / Command port	—	
	PJLink control	ON	
	ECO management		
Standby mode	—		
	Standby mode	Normal, Network	
Functions	Monitoring and control functions	Auto search (local network) function	×
		Device status monitoring function (Simplified)	○
		Device location information registering function (Map monitoring function)	○
		Command transmission function	○
		Simultaneous image distribution function	×
		Distribution image deletion function	×
		Interrupting delivery function	×
		Brightness control function	×
		ECO management function	○
		Signage schedule acquisition and delivery functions	×
		Maintenance log save function	○
		Contents list delivery function	×
		ECO Power Level Monitor Function	×
		Wireless settings display function	×
	Light ID control function	×	
	Early warning function (paid)	Status monitoring function (Details)	○
		Error, warning, and notification guidance displays function	○
		Basic control functions (power, Shutter / AV muting)	○
		Fan failure prediction function	×
		Filter clog prediction	×
		Maintenance prediction function	○
		Temperature information graph display function	○
		Voltage information graph display function	×
Display of WEB control screen for devices function		○	
System log acquisition (automatic acquisition only when error, warning, or notification occurs)		×	
Stopped camera image detecting function	○		

\*1: This is the user name provided at the time of shipment.

\*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

■ PT-EX16K

■ PT-EX12K

The letters\* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

\* Alphabet letters at end (place of destination: E/U/(blank))

Model group: **Rich information model**

○: Supported    ×: Not supported    —: Not available

		Setting / compatibility		
Optional accessories	Expansion boards	Not used		
Connection to projector	IP address	Only fixed IP address supported		
	WEB control screen login	User name	admin1*1	
		Password	panasonic*2	
	Content Manager login	User name	—	
		Password	—	
Projector settings	Network standby	—		
	Network control			
	WEB control	ON		
	Command control	—		
	WEB port / Command port	—		
	PJLink control	ON		
	ECO management			
Standby mode	—			
Functions	Standby mode			
	Auto search (local network) function		×	
	Device status monitoring function (Simplified)		○	
	Device location information registering function (Map monitoring function)		○	
	Command transmission function		○	
	Simultaneous image distribution function		×	
	Distribution image deletion function		×	
	Interrupting delivery function		×	
	Brightness control function		×	
	ECO management function		×	
	Signage schedule acquisition and delivery functions		×	
	Maintenance log save function		○	
	Contents list delivery function		×	
	ECO Power Level Monitor Function		×	
	Wireless settings display function		×	
	Light ID control function		×	
	Early warning function (paid)	Status monitoring function (Details)		○
		Error, warning, and notification guidance displays function		○
		Basic control functions (power, Shutter / AV muting)		○
		Fan failure prediction function		×
Filter clog prediction		×		
Maintenance prediction function		○		
Temperature information graph display function		○		
Voltage information graph display function		×		
Display of WEB control screen for devices function		○		
System log acquisition (automatic acquisition only when error, warning, or notification occurs)		×		
Stopped camera image detecting function		○		

\*1: This is the user name provided at the time of shipment.

\*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

## PT-VZ585N / PT-VW545N / PT-VX615N

The letters\* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

\* Alphabet letters at end (place of destination: D/J/T/(blank))

Model group: **Rich information model**

○: Supported    ×: Not supported    —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards	Not used	
Connection to projector	IP address	Only fixed IP address supported	
	WEB control screen login	User name	admin1*1
		Password	panasonic*2
	Content Manager login	User name	—
Password		—	
Projector settings	Network standby	—	
	Network control		
	WEB control	ON	
	Command control	—	
	WEB port / Command port	—	
	PJLink control	ON	
	ECO management		
Standby mode	Normal		
Standby mode		—	
Functions	Monitoring and control functions	Auto search (local network) function	○
		Device status monitoring function (Simplified)	○
		Device location information registering function (Map monitoring function)	○
		Command transmission function	○
		Simultaneous image distribution function	○
		Distribution image deletion function	○
		Interrupting delivery function	×
		Brightness control function	×
		ECO management function	○
		Signage schedule acquisition and delivery functions	×
		Maintenance log save function	○
		Contents list delivery function	×
		ECO Power Level Monitor Function	×
		Wireless settings display function	○
	Light ID control function	×	
	Early warning function (paid)	Status monitoring function (Details)	○
		Error, warning, and notification guidance displays function	○
		Basic control functions (power, Shutter / AV muting)	○
		Fan failure prediction function	○
		Filter clog prediction	×
		Maintenance prediction function	○
		Temperature information graph display function	○
		Voltage information graph display function	×
Display of WEB control screen for devices function		○	
System log acquisition (automatic acquisition only when error, warning, or notification occurs)	×		
Stopped camera image detecting function	○		

\*1: This is the user name provided at the time of shipment.

\*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

■ PT-VZ575N / PT-VW535N / PT-VX605N

■ PT-VW355N / PT-VX425N

■ PT-VW345N / PT-VX415N

The letters\* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

\* Alphabet letters at end (place of destination: D/J/T/Z/(blank))

Model group: **Rich information model**

○: Supported    ×: Not supported    —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards	Not used	
Connection to projector	IP address	Only fixed IP address supported	
	WEB control screen login	User name	admin1*1
		Password	panasonic*2
	Content Manager login	User name	—
Password		—	
Projector settings	Network standby	—	
	Network control	ON	
	WEB control	—	
	Command control	—	
	WEB port / Command port	—	
	PJLink control	—	
	ECO management		
Standby mode	—		
Standby mode	Normal		
Functions	Monitoring and control functions	Auto search (local network) function	○
		Device status monitoring function (Simplified)	○
		Device location information registering function (Map monitoring function)	○
		Command transmission function	○
		Simultaneous image distribution function	○
		Distribution image deletion function	○
		Interrupting delivery function	×
		Brightness control function	×
		ECO management function	○
		Signage schedule acquisition and delivery functions	×
		Maintenance log save function	○
		Contents list delivery function	×
		ECO Power Level Monitor Function	×
		Wireless settings display function	○
	Light ID control function	×	
	Early warning function (paid)	Status monitoring function (Details)	○
		Error, warning, and notification guidance displays function	○
		Basic control functions (power, Shutter / AV muting)	○
		Fan failure prediction function	×
		Filter clog prediction	×
Maintenance prediction function		○	
Temperature information graph display function		○	
Voltage information graph display function		×	
Display of WEB control screen for devices function	○		
System log acquisition (automatic acquisition only when error, warning, or notification occurs)	×		
Stopped camera image detecting function	○		

\*1: This is the user name provided at the time of shipment.

\*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.



# PT-VZ580 / PT-VW540 / PT-VX610 / PT-VX61 / PT-VX51

The letters\* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

\* Alphabet letters at end (place of destination: D/J/K/K1/T/(blank))

Model group: **Rich information model**

○: Supported    ×: Not supported    —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards	Not used	
Connection to projector	IP address	Only fixed IP address supported	
	WEB control screen login	User name	admin1* <sup>1</sup>
		Password	panasonic* <sup>2</sup>
	Content Manager login	User name	—
Password		—	
Projector settings	Network standby	—	
	Network control		
	WEB control	ON	
	Command control	ON	
	WEB port / Command port	—	
	PJLink control	ON	
ECO management			
Standby mode	—		
Standby mode		Normal	
Functions	Monitoring and control functions	Auto search (local network) function	×
		Device status monitoring function (Simplified)	○
		Device location information registering function (Map monitoring function)	○
		Command transmission function	○
		Simultaneous image distribution function	×
		Distribution image deletion function	×
		Interrupting delivery function	×
		Brightness control function	×
		ECO management function	○
		Signage schedule acquisition and delivery functions	×
		Maintenance log save function	○
		Contents list delivery function	×
		ECO Power Level Monitor Function	×
	Early warning function (paid)	Wireless settings display function	×
		Light ID control function	×
		Status monitoring function (Details)	○
		Error, warning, and notification guidance displays function	○
		Basic control functions (power, Shutter / AV muting)	○
		Fan failure prediction function	○
		Filter clog prediction	×
Maintenance prediction function	○		
Temperature information graph display function	○		
Voltage information graph display function	×		
Display of WEB control screen for devices function	○		
System log acquisition (automatic acquisition only when error, warning, or notification occurs)	×		
Stopped camera image detecting function	○		

\*1: This is the user name provided at the time of shipment.

\*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

■ PT-VZ570 / PT-VW530 / PT-VX600

■ PT-VX60 / PT-VX50

The letters\* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

\* Alphabet letters at end (place of destination: D/T/(blank))

Model group: **Rich information model**

○: Supported    ×: Not supported    —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards	Not used	
Connection to projector	IP address	Only fixed IP address supported	
	WEB control screen login	User name	admin1*1
		Password	panasonic*2
	Content Manager login	User name	—
Password		—	
Projector settings	Network standby	—	
	Network control	ON	
	WEB control	—	
	Command control	—	
	WEB port / Command port	—	
	PJLink control	—	
	ECO management		
Standby mode	—		
	Standby mode	Normal	
Functions	Monitoring and control functions	Auto search (local network) function	×
		Device status monitoring function (Simplified)	○
		Device location information registering function (Map monitoring function)	○
		Command transmission function	○
		Simultaneous image distribution function	×
		Distribution image deletion function	×
		Interrupting delivery function	×
		Brightness control function	×
		ECO management function	○
		Signage schedule acquisition and delivery functions	×
		Maintenance log save function	○
		Contents list delivery function	×
		ECO Power Level Monitor Function	×
	Wireless settings display function	×	
	Light ID control function	×	
	Early warning function (paid)	Status monitoring function (Details)	○
		Error, warning, and notification guidance displays function	○
		Basic control functions (power, Shutter / AV muting)	○
		Fan failure prediction function	×
		Filter clog prediction	×
		Maintenance prediction function	○
		Temperature information graph display function	○
		Voltage information graph display function	×
Display of WEB control screen for devices function		○	
System log acquisition (automatic acquisition only when error, warning, or notification occurs)		×	
Stopped camera image detecting function	○		

\*1: This is the user name provided at the time of shipment.

\*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

# PT-VZ470

The letters\* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

\* Alphabet letters at end (place of destination: D/(blank))

Model group: **Rich information model**

○: Supported    ×: Not supported    —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards	Not used	
Connection to projector	IP address	Only fixed IP address supported	
	WEB control screen login	User name	admin1* <sup>1</sup>
		Password	panasonic* <sup>2</sup>
	Content Manager login	User name	—
Password		—	
Projector settings	Network standby	—	
	Network control	ON	
	WEB control	—	
	Command control	—	
	WEB port / Command port	—	
	PJLink control	—	
	ECO management		
Standby mode	—		
Standby mode	Normal		
Functions	Monitoring and control functions	Auto search (local network) function	×
		Device status monitoring function (Simplified)	○
		Device location information registering function (Map monitoring function)	○
		Command transmission function	○
		Simultaneous image distribution function	×
		Distribution image deletion function	×
		Interrupting delivery function	×
		Brightness control function	×
		ECO management function	○
		Signage schedule acquisition and delivery functions	×
		Maintenance log save function	○
		Contents list delivery function	×
		ECO Power Level Monitor Function	×
	Wireless settings display function	×	
	Light ID control function	×	
	Early warning function (paid)	Status monitoring function (Details)	○
		Error, warning, and notification guidance displays function	○
		Basic control functions (power, Shutter / AV muting)	○
		Fan failure prediction function	○
		Filter clog prediction	×
Maintenance prediction function		○	
Temperature information graph display function		○	
Voltage information graph display function		×	
Display of WEB control screen for devices function	○		
System log acquisition (automatic acquisition only when error, warning, or notification occurs)	×		
Stopped camera image detecting function	○		

\*1: This is the user name provided at the time of shipment.

\*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

■ PT-VW440 / PT-VX510

■ PT-VW431D

■ PT-VW430 / PT-VX501 / PT-VX500 / PT-VX405 / PT-VX45

The letters\* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

\* Alphabet letters at end (place of destination: E/EA/KEA/U/(blank))

Model group: **Rich information model**

○: Supported    ×: Not supported    —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards	Not used	
Connection to projector	IP address	Only fixed IP address supported	
	WEB control screen login	User name	admin1*1
		Password	panasonic*2
	Content Manager login	User name	—
Password		—	
Projector settings	Network standby	—	
	Network control	ON	
	WEB control	—	
	Command control	—	
	WEB port / Command port	—	
	PJLink control	—	
	ECO management		
Standby mode	—		
	Standby mode	Network	
Functions	Monitoring and control functions	Auto search (local network) function	×
		Device status monitoring function (Simplified)	○
		Device location information registering function (Map monitoring function)	○
		Command transmission function	○
		Simultaneous image distribution function	×
		Distribution image deletion function	×
		Interrupting delivery function	×
		Brightness control function	×
		ECO management function	×
		Signage schedule acquisition and delivery functions	×
		Maintenance log save function	○
		Contents list delivery function	×
		ECO Power Level Monitor Function	×
	Wireless settings display function	×	
	Light ID control function	×	
	Early warning function (paid)	Status monitoring function (Details)	○
		Error, warning, and notification guidance displays function	○
		Basic control functions (power, Shutter / AV muting)	○
		Fan failure prediction function	×
		Filter clog prediction	×
Maintenance prediction function		○	
Temperature information graph display function		○	
Voltage information graph display function		×	
Display of WEB control screen for devices function		○	
System log acquisition (automatic acquisition only when error, warning, or notification occurs)	×		
	Stopped camera image detecting function	○	

\*1: This is the user name provided at the time of shipment.

\*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

# PT-VW330 / PT-VX400

## PT-VX41

The letters\* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

\* Alphabet letters at end (place of destination: E/EA/KEA/U/(blank))

Model group: **Rich information model**

○: Supported    ×: Not supported    —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards	Not used	
Connection to projector	IP address	Only fixed IP address supported	
	WEB control screen login	User name	admin1*1
		Password	panasonic*2
	Content Manager login	User name	—
		Password	—
Projector settings	Network standby	—	
	Network control	ON	
	WEB control	—	
	Command control	—	
	WEB port / Command port	—	
	PJLink control	—	
	ECO management	—	
Standby mode	—		
	Standby mode	Network	
Functions	Monitoring and control functions	Auto search (local network) function	×
		Device status monitoring function (Simplified)	○
		Device location information registering function (Map monitoring function)	○
		Command transmission function	○
		Simultaneous image distribution function	×
		Distribution image deletion function	×
		Interrupting delivery function	×
		Brightness control function	×
		ECO management function	×
		Signage schedule acquisition and delivery functions	×
		Maintenance log save function	○
		Contents list delivery function	×
		ECO Power Level Monitor Function	×
		Wireless settings display function	×
	Light ID control function	×	
	Early warning function (paid)	Status monitoring function (Details)	○
		Error, warning, and notification guidance displays function	○
		Basic control functions (power, Shutter / AV muting)	○
		Fan failure prediction function	×
		Filter clog prediction	×
		Maintenance prediction function	○
		Temperature information graph display function	○
		Voltage information graph display function	×
Display of WEB control screen for devices function		○	
System log acquisition (automatic acquisition only when error, warning, or notification occurs)	×		
	Stopped camera image detecting function	○	

\*1: This is the user name provided at the time of shipment.

\*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

# PT-VW435N / PT-VX505N

# PT-VX400NT

The letters\* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

\* Alphabet letters at end (place of destination: E/EA/U/(blank))

Model group: **Rich information model**

○: Supported    ×: Not supported    —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards	Not used	
Connection to projector	IP address	Only fixed IP address supported	
	WEB control screen login	User name	admin1* <sup>1</sup>
		Password	panasonic* <sup>2</sup>
	Content Manager login	User name	—
		Password	—
Projector settings	Network standby	—	
	Network control	ON	
	WEB control	—	
	Command control	—	
	WEB port / Command port	—	
	PJLink control	—	
	ECO management	—	
	Standby mode	—	
Standby mode	Network		
Functions	Monitoring and control functions	Auto search (local network) function	○
		Device status monitoring function (Simplified)	○
		Device location information registering function (Map monitoring function)	○
		Command transmission function	○
		Simultaneous image distribution function	○
		Distribution image deletion function	○
		Interrupting delivery function	×
		Brightness control function	×
		ECO management function	×
		Signage schedule acquisition and delivery functions	×
		Maintenance log save function	○
		Contents list delivery function	×
		ECO Power Level Monitor Function	×
		Wireless settings display function	×
	Light ID control function	×	
	Early warning function (paid)	Status monitoring function (Details)	○
		Error, warning, and notification guidance displays function	○
		Basic control functions (power, Shutter / AV muting)	○
		Fan failure prediction function	×
		Filter clog prediction	×
		Maintenance prediction function	○
		Temperature information graph display function	○
		Voltage information graph display function	×
		Display of WEB control screen for devices function	○
		System log acquisition (automatic acquisition only when error, warning, or notification occurs)	×
		Stopped camera image detecting function	○

\*1: This is the user name provided at the time of shipment.

\*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

# PT-VW360 / PT-VX430 / PT-VX431K

The letters\* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

\* Alphabet letters at end (place of destination: D/T/J/(blank))

Model group: **Rich information model**

○: Supported    ×: Not supported    —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards	Not used	
Connection to projector	IP address	Only fixed IP address supported	
	WEB control screen login	User name	dispadmin*1
		Password	@Panasonic*2
	Content Manager login	User name	—
Password		—	
Projector settings	Network standby	—	
	Network control	ON	
	WEB control	—	
	Command control	—	
	WEB port / Command port	—	
	PJLink control	—	
ECO management	Standby mode	—	
	Standby mode	Normal	
Functions	Monitoring and control functions	Auto search (local network) function	×
		Device status monitoring function (Simplified)	○
		Device location information registering function (Map monitoring function)	○
		Command transmission function	○
		Simultaneous image distribution function	×
		Distribution image deletion function	×
		Interrupting delivery function	×
		Brightness control function	×
		ECO management function	○
		Signage schedule acquisition and delivery functions	×
		Maintenance log save function	○
		Contents list delivery function	×
		ECO Power Level Monitor Function	×
	Early warning function (paid)	Wireless settings display function	×
		Light ID control function	×
		Status monitoring function (Details)	○
		Error, warning, and notification guidance displays function	○
		Basic control functions (power, Shutter / AV muting)	○
		Fan failure prediction function	×
		Filter clog prediction	×
Maintenance prediction function	○		
	Temperature information graph display function	○	
	Voltage information graph display function	×	
	Display of WEB control screen for devices function	○	
	System log acquisition (automatic acquisition only when error, warning, or notification occurs)	×	
	Stopped camera image detecting function	○	

\*1: This is the user name provided at the time of shipment.

\*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

■ PT-VW350 / PT-VX420

■ PT-VW340 / PT-VX410 / PT-VX42

The letters\* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

\* Alphabet letters at end (place of destination: D/EA/J/T/Z/(blank))

Model group: **Rich information model**

○: Supported    ×: Not supported    —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards	Not used	
Connection to projector	IP address	Only fixed IP address supported	
	WEB control screen login	User name	admin1*1
		Password	panasonic*2
	Content Manager login	User name	—
		Password	—
Projector settings	Network standby	—	
	Network control	ON	
	WEB control	—	
	Command control	—	
	WEB port / Command port	—	
	PJLink control	—	
	ECO management		
Standby mode	—		
	Standby mode	Normal	
Functions	Monitoring and control functions	Auto search (local network) function	×
		Device status monitoring function (Simplified)	○
		Device location information registering function (Map monitoring function)	○
		Command transmission function	○
		Simultaneous image distribution function	×
		Distribution image deletion function	×
		Interrupting delivery function	×
		Brightness control function	×
		ECO management function	○
		Signage schedule acquisition and delivery functions	×
		Maintenance log save function	○
		Contents list delivery function	×
		ECO Power Level Monitor Function	×
		Wireless settings display function	×
	Light ID control function	×	
	Early warning function (paid)	Status monitoring function (Details)	○
		Error, warning, and notification guidance displays function	○
		Basic control functions (power, Shutter / AV muting)	○
		Fan failure prediction function	×
		Filter clog prediction	×
		Maintenance prediction function	○
		Temperature information graph display function	○
		Voltage information graph display function	×
Display of WEB control screen for devices function		○	
System log acquisition (automatic acquisition only when error, warning, or notification occurs)	×		
	Stopped camera image detecting function	○	

\*1: This is the user name provided at the time of shipment.

\*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.



■ PT-VX421

■ PT-VX406 / PT-VX46

The letters\* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

\* Alphabet letters at end (place of destination: D/EA/J/T/Z/(blank))

Model group: **Rich information model**

○: Supported    ×: Not supported    —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards	Not used	
Connection to projector	IP address	Only fixed IP address supported	
	WEB control screen login	User name	admin1*1
		Password	panasonic*2
	Content Manager login	User name	—
Password		—	
Projector settings	Network standby	—	
	Network control	ON	
	WEB control	—	
	Command control	—	
	WEB port / Command port	—	
	PJLink control	—	
	ECO management		
Standby mode	—		
	Standby mode	Normal	
Functions	Monitoring and control functions	Auto search (local network) function	×
		Device status monitoring function (Simplified)	○
		Device location information registering function (Map monitoring function)	○
		Command transmission function	○
		Simultaneous image distribution function	×
		Distribution image deletion function	×
		Interrupting delivery function	×
		Brightness control function	×
		ECO management function	○
		Signage schedule acquisition and delivery functions	×
		Maintenance log save function	○
		Contents list delivery function	×
		ECO Power Level Monitor Function	×
	Wireless settings display function	×	
	Light ID control function	×	
	Early warning function (paid)	Status monitoring function (Details)	○
		Error, warning, and notification guidance displays function	○
		Basic control functions (power, Shutter / AV muting)	○
		Fan failure prediction function	×
		Filter clog prediction	×
Maintenance prediction function		○	
Temperature information graph display function		○	
Voltage information graph display function		×	
Display of WEB control screen for devices function		○	
System log acquisition (automatic acquisition only when error, warning, or notification occurs)	×		
	Stopped camera image detecting function	○	

\*1: This is the user name provided at the time of shipment.

\*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

## PT-FW430 / PT-FX400

The letters\* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

\* Alphabet letters at end (place of destination: E/EA/U/(blank))

Model group: **Rich information model**

○: Supported    ×: Not supported    —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards	Not used	
Connection to projector	IP address	Only fixed IP address supported	
	WEB control screen login	User name	admin1* <sup>1</sup>
		Password	panasonic* <sup>2</sup>
	Content Manager login	User name	—
Password		—	
Projector settings	Network standby	—	
	Network control	ON	
	WEB control	—	
	Command control	—	
	WEB port / Command port	—	
	PJLink control	—	
	ECO management		
Standby mode	—		
Standby mode	Normal		
Functions	Monitoring and control functions	Auto search (local network) function	○
		Device status monitoring function (Simplified)	○
		Device location information registering function (Map monitoring function)	○
		Command transmission function	○
		Simultaneous image distribution function	○
		Distribution image deletion function	○
		Interrupting delivery function	×
		Brightness control function	×
		ECO management function	○
		Signage schedule acquisition and delivery functions	×
		Maintenance log save function	○
		Contents list delivery function	×
		ECO Power Level Monitor Function	×
		Wireless settings display function	×
		Light ID control function	×
	Early warning function (paid)	Status monitoring function (Details)	○
		Error, warning, and notification guidance displays function	○
		Basic control functions (power, Shutter / AV muting)	○
		Fan failure prediction function	×
		Filter clog prediction	×
		Maintenance prediction function	○
		Temperature information graph display function	○
		Voltage information graph display function	×
Display of WEB control screen for devices function	○		
System log acquisition (automatic acquisition only when error, warning, or notification occurs)	×		
Stopped camera image detecting function	○		

\*1: This is the user name provided at the time of shipment.

\*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

## PT-FW300NT / PT-FW300 / PT-F300NT / PT-F300

The letters\* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

\* Alphabet letters at end (place of destination: E/EA/U/(blank))

Model group: **Rich information model**

○: Supported    ×: Not supported    —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards	Not used	
Connection to projector	IP address	Only fixed IP address supported	
	WEB control screen login	User name	admin1*1
		Password	panasonic*2
	Content Manager login	User name	—
Password		—	
Projector settings	Network standby	ON	
	Network control	ON	
	WEB control	—	
	Command control	—	
	WEB port / Command port	—	
	PJLink control	—	
ECO management	Standby mode	—	
	Standby mode	—	
Functions	Monitoring and control functions	Auto search (local network) function	○
		Device status monitoring function (Simplified)	○
		Device location information registering function (Map monitoring function)	○
		Command transmission function	○
		Simultaneous image distribution function	○
		Distribution image deletion function	○
		Interrupting delivery function	×
		Brightness control function	×
		ECO management function	×
		Signage schedule acquisition and delivery functions	×
		Maintenance log save function	○
		Contents list delivery function	×
		ECO Power Level Monitor Function	×
		Wireless settings display function	×
	Light ID control function	×	
	Early warning function (paid)	Status monitoring function (Details)	○
		Error, warning, and notification guidance displays function	○
		Basic control functions (power, Shutter / AV muting)	○
		Fan failure prediction function	×
		Filter clog prediction	×
Maintenance prediction function		○	
Temperature information graph display function		○	
Voltage information graph display function		×	
Display of WEB control screen for devices function	○		
System log acquisition (automatic acquisition only when error, warning, or notification occurs)	×		
Stopped camera image detecting function	○		

\*1: This is the user name provided at the time of shipment.

\*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

## PT-FW100NT / PT-F100NT

## PT-F200NT

The letters\* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

\* Alphabet letters at end (place of destination: E/EA/U/(blank))

Model group: **Rich information model**

○: Supported    ×: Not supported    —: Not available

		Setting / compatibility		
Optional accessories	Expansion boards	Not used		
Connection to projector	IP address	Only fixed IP address supported		
	WEB control screen login	User name	user1	
		Password	No password set* <sup>1</sup>	
	Content Manager login	User name	—	
		Password	—	
Projector settings	Network standby	ON		
	Network control			
	WEB control	ON		
	Command control	—		
	WEB port / Command port	—		
	PJLink control	—		
	ECO management			
Standby mode	—			
Functions	Standby mode			
	Auto search (local network) function		×	
	Device status monitoring function (Simplified)		○	
	Device location information registering function (Map monitoring function)		○	
	Command transmission function		○	
	Simultaneous image distribution function		×	
	Distribution image deletion function		×	
	Interrupting delivery function		×	
	Brightness control function		×	
	ECO management function		×	
	Signage schedule acquisition and delivery functions		×	
	Maintenance log save function		×	
	Contents list delivery function		×	
	ECO Power Level Monitor Function		×	
	Wireless settings display function		×	
	Light ID control function		×	
	Early warning function (paid)	Status monitoring function (Details)		○
		Error, warning, and notification guidance displays function		○
		Basic control functions (power, Shutter / AV muting)		○
		Fan failure prediction function		×
		Filter clog prediction		×
		Maintenance prediction function		○
		Temperature information graph display function		×
Voltage information graph display function		×		
Display of WEB control screen for devices function		○		
System log acquisition (automatic acquisition only when error, warning, or notification occurs)		×		
Stopped camera image detecting function		○		

\*1: This is the setting provided at the time of shipment. Use the same password as for WEB control of the projector unit.

## PT-LZ370

The letters\* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

\* Alphabet letters at end (place of destination: E/EA/U/(blank))

Model group: **Rich information model**

○: Supported    ×: Not supported    —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards		Not used
Connection to projector	IP address		Only fixed IP address supported
	WEB control screen login	User name	admin1* <sup>1</sup>
		Password	panasonic* <sup>2</sup>
	Content Manager login	User name	—
Password		—	
Projector settings	Network standby		—
	Network control		ON
	WEB control		—
	Command control		—
	WEB port / Command port		—
	PJLink control		—
	ECO management		
	Standby mode	—	
	Standby mode	Normal	
Functions	Monitoring and control functions	Auto search (local network) function	×
		Device status monitoring function (Simplified)	○
		Device location information registering function (Map monitoring function)	○
		Command transmission function	○
		Simultaneous image distribution function	×
		Distribution image deletion function	×
		Interrupting delivery function	×
		Brightness control function	×
		ECO management function	○
		Signage schedule acquisition and delivery functions	×
		Maintenance log save function	○
		Contents list delivery function	×
		ECO Power Level Monitor Function	×
	Wireless settings display function	×	
	Light ID control function	×	
	Early warning function (paid)	Status monitoring function (Details)	○
		Error, warning, and notification guidance displays function	○
		Basic control functions (power, Shutter / AV muting)	○
		Fan failure prediction function	×
		Filter clog prediction	×
Maintenance prediction function		○	
Temperature information graph display function		○	
Voltage information graph display function		×	
Display of WEB control screen for devices function	○		
System log acquisition (automatic acquisition only when error, warning, or notification occurs)	×		
Stopped camera image detecting function	○		

\*1: This is the user name provided at the time of shipment.

\*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

■ PT-LW375 / PT-LW335 / PT-LB425 / PT-LB385 / PT-LB355

■ PT-TW371R / PT-TW370 / PT-TX430 / PT-TX340

The letters\* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

\* Alphabet letters at end (place of destination: D/J/K/T/U/(blank))

Model group: **Basic information model**

○: Supported X: Not supported —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards	Not used	
Connection to projector	IP address	Only fixed IP address supported	
	WEB control screen login	User name	admin
		Password	admin1* <sup>1</sup>
	Content Manager login	User name	—
		Password	—
Projector settings	Network standby	—	
	Network control		
	WEB control	—	
	Command control	—	
	WEB port / Command port	—	
	PJLink control	—	
	ECO management		
Standby mode	—		
Standby mode		Normal	
Functions	Monitoring and control functions	Auto search (local network) function	X
		Device status monitoring function (Simplified)	○
		Device location information registering function (Map monitoring function)	○
		Command transmission function	X
		Simultaneous image distribution function	X
		Distribution image deletion function	X
		Interrupting delivery function	X
		Brightness control function	X
		ECO management function	X
		Signage schedule acquisition and delivery functions	X
		Maintenance log save function	X
		Contents list delivery function	X
		ECO Power Level Monitor Function	X
		Wireless settings display function	X
	Light ID control function	X	
	Early warning function (paid)	Status monitoring function (Details)	○
		Error, warning, and notification guidance displays function	○
		Basic control functions (power, Shutter / AV muting)	○
		Fan failure prediction function	X
		Filter clog prediction	X
		Maintenance prediction function	X
		Temperature information graph display function	X
		Voltage information graph display function	X
Display of WEB control screen for devices function		○	
System log acquisition (automatic acquisition only when error, warning, or notification occurs)	X		
Stopped camera image detecting function	○		

\*1: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

■ PT-LW373 / PT-LW333 / PT-LB423 / PT-LB383 / PT-LB353

■ PT-TW351R / PT-TW350 / PT-TX410 / PT-TX320

■ PT-LW362 / PT-LW312 / PT-LB412 / PT-LB382 / PT-LB332

The letters\* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

\* Alphabet letters at end (place of destination: D/J/(blank))

Model group: **Basic information model**

○: Supported    ×: Not supported    —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards	Not used	
Connection to projector	IP address	Only fixed IP address supported	
	WEB control screen login	User name	admin
		Password	admin1*1
	Content Manager login	User name	—
Password		—	
Projector settings	Network standby	—	
	Network control		
	WEB control	—	
	Command control	—	
	WEB port / Command port	—	
	PJLink control	—	
ECO management			
	Standby mode	—	
	Standby mode	Normal	
Functions	Monitoring and control functions	Auto search (local network) function	×
		Device status monitoring function (Simplified)	○
		Device location information registering function (Map monitoring function)	○
		Command transmission function	×
		Simultaneous image distribution function	×
		Distribution image deletion function	×
		Interrupting delivery function	×
		Brightness control function	×
		ECO management function	×
		Signage schedule acquisition and delivery functions	×
		Maintenance log save function	×
		Contents list delivery function	×
		ECO Power Level Monitor Function	×
	Early warning function (paid)	Wireless settings display function	×
		Light ID control function	×
		Status monitoring function (Details)	○
		Error, warning, and notification guidance displays function	○
		Basic control functions (power, Shutter / AV muting)	○
		Fan failure prediction function	×
		Filter clog prediction	×
Maintenance prediction function	×		
Temperature information graph display function	×		
Voltage information graph display function	×		
Display of WEB control screen for devices function	○		
System log acquisition (automatic acquisition only when error, warning, or notification occurs)	×		
Stopped camera image detecting function	○		

\*1: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

■ PT-LW330\*2 / PT-LW280\*2 / PT-LB360\*2 / PT-LB330\*2

■ PT-TW343R / PT-TW342 / PT-TX402 / PT-TX312

■ PT-TW341R\*2 / PT-TW340\*2 / PT-TW250\*2 / PT-TX400\*2 / PT-TX310\*2

The letters\* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

\* Alphabet letters at end (place of destination: D/J/(blank))

Model group: **Basic information model**

○: Supported    ×: Not supported    —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards	Not used	
Connection to projector	IP address	Only fixed IP address supported	
	WEB control screen login	User name	admin
		Password	admin1*1
	Content Manager login	User name	—
Password		—	
Projector settings	Network standby	—	
	Network control		
	WEB control	—	
	Command control	—	
	WEB port / Command port	—	
	PJLink control	—	
ECO management	Standby mode	—	
	Standby mode	Normal	
Functions	Monitoring and control functions	Auto search (local network) function	×
		Device status monitoring function (Simplified)	○
		Device location information registering function (Map monitoring function)	○
		Command transmission function	×
		Simultaneous image distribution function	×
		Distribution image deletion function	×
		Interrupting delivery function	×
		Brightness control function	×
		ECO management function	×
		Signage schedule acquisition and delivery functions	×
		Maintenance log save function	×
		Contents list delivery function	×
		ECO Power Level Monitor Function	×
	Early warning function (paid)	Wireless settings display function	×
		Light ID control function	×
		Status monitoring function (Details)	○
		Error, warning, and notification guidance displays function	○
		Basic control functions (power, Shutter / AV muting)	○
		Fan failure prediction function	×
		Filter clog prediction	×
Maintenance prediction function	×		
Temperature information graph display function	×		
Voltage information graph display function	×		
Display of WEB control screen for devices function	○		
System log acquisition (automatic acquisition only when error, warning, or notification occurs)	×		
Stopped camera image detecting function	○		

\*1: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

\*2: Only devices with serial numbers that start with "B" or "DB53" are supported.



■ PT-LW25H / PT-LX30H / PT-LX26H

■ PT-TW231R / PT-TW230

The letters\* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

\* Alphabet letters at end (place of destination: E/EA/U/(blank))

Model group: **Rich information model**

○: Supported    ×: Not supported    —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards	Not used	
Connection to projector	IP address	Only fixed IP address supported	
	WEB control screen login	User name	admin1*1
		Password	panasonic*2
	Content Manager login	User name	—
		Password	—
Projector settings	Network standby	—	
	Network control	ON	
	WEB control	—	
	Command control	—	
	WEB port / Command port	—	
	PJLink control	—	
	ECO management	—	
Standby mode	—		
	Standby mode	Network	
Functions	Monitoring and control functions	Auto search (local network) function	×
		Device status monitoring function (Simplified)	○
		Device location information registering function (Map monitoring function)	○
		Command transmission function	○
		Simultaneous image distribution function	×
		Distribution image deletion function	×
		Interrupting delivery function	×
		Brightness control function	×
		ECO management function	×
		Signage schedule acquisition and delivery functions	×
		Maintenance log save function	○
		Contents list delivery function	×
		ECO Power Level Monitor Function	×
		Wireless settings display function	×
	Light ID control function	×	
	Early warning function (paid)	Status monitoring function (Details)	○
		Error, warning, and notification guidance displays function	○
		Basic control functions (power, Shutter / AV muting)	○
		Fan failure prediction function	×
		Filter clog prediction	×
		Maintenance prediction function	○
		Temperature information graph display function	○
		Voltage information graph display function	×
Display of WEB control screen for devices function		○	
System log acquisition (automatic acquisition only when error, warning, or notification occurs)	×		
	Stopped camera image detecting function	○	

\*1: This is the user name provided at the time of shipment.

\*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

# PT-LB90NT

The letters\* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

\* Alphabet letters at end (place of destination: E/EA/U/(blank))

Model group: **Rich information model**

○: Supported    ×: Not supported    —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards	Not used	
Connection to projector	IP address	Only fixed IP address supported	
	WEB control screen login	User name	admin1* <sup>1</sup>
		Password	panasonic* <sup>2</sup>
	Content Manager login	User name	—
Password		—	
Projector settings	Network standby	—	
	Network control	ON	
	WEB control	—	
	Command control	—	
	WEB port / Command port	—	
	PJLink control	—	
	ECO management		
Standby mode	—		
Standby mode	Normal		
Functions	Monitoring and control functions	Auto search (local network) function	○
		Device status monitoring function (Simplified)	○
		Device location information registering function (Map monitoring function)	○
		Command transmission function	○
		Simultaneous image distribution function	○
		Distribution image deletion function	○
		Interrupting delivery function	×
		Brightness control function	×
		ECO management function	×
		Signage schedule acquisition and delivery functions	×
		Maintenance log save function	○
		Contents list delivery function	×
		ECO Power Level Monitor Function	×
		Wireless settings display function	×
	Light ID control function	×	
	Early warning function (paid)	Status monitoring function (Details)	○
		Error, warning, and notification guidance displays function	○
		Basic control functions (power, Shutter / AV muting)	○
		Fan failure prediction function	×
		Filter clog prediction	×
		Maintenance prediction function	○
		Temperature information graph display function	○
		Voltage information graph display function	×
Display of WEB control screen for devices function		○	
System log acquisition (automatic acquisition only when error, warning, or notification occurs)	×		
Stopped camera image detecting function	○		

\*1: This is the user name provided at the time of shipment.

\*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

# PT-LB3 / PT-LB2V / PT-LB2 / PT-LB1V / PT-LB1 / PT-ST10

The letters\* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

\* Alphabet letters at end (place of destination: E/EA/U/(blank))

Model group: **Rich information model**

○: Supported    ×: Not supported    —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards	Not used	
Connection to projector	IP address	Only fixed IP address supported	
	WEB control screen login	User name	admin1* <sup>1</sup>
		Password	panasonic* <sup>2</sup>
	Content Manager login	User name	—
Password		—	
Projector settings	Network standby	—	
	Network control	ON	
	WEB control	—	
	Command control	—	
	WEB port / Command port	—	
	PJLink control	—	
	ECO management		
Standby mode	—		
Standby mode	Normal		
Functions	Monitoring and control functions	Auto search (local network) function	×
		Device status monitoring function (Simplified)	○
		Device location information registering function (Map monitoring function)	○
		Command transmission function	○
		Simultaneous image distribution function	×
		Distribution image deletion function	×
		Interrupting delivery function	×
		Brightness control function	×
		ECO management function	×
		Signage schedule acquisition and delivery functions	×
		Maintenance log save function	○
		Contents list delivery function	×
		ECO Power Level Monitor Function	×
	Wireless settings display function	×	
	Light ID control function	×	
	Early warning function (paid)	Status monitoring function (Details)	○
		Error, warning, and notification guidance displays function	○
		Basic control functions (power, Shutter / AV muting)	○
		Fan failure prediction function	×
		Filter clog prediction	×
Maintenance prediction function		○	
Temperature information graph display function		○	
Voltage information graph display function		×	
Display of WEB control screen for devices function	○		
System log acquisition (automatic acquisition only when error, warning, or notification occurs)	×		
Stopped camera image detecting function	○		

\*1: This is the user name provided at the time of shipment.

\*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

## ■ NTN91003 / NTN91002

## ■ PT-JX200F / PT-JX200G / PT-JX200H

The letters\* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

\* Alphabet letters at end (place of destination: D/E/K/T/U, cabinet color: B/W)

Model group: **Rich information model**

○: Supported    ×: Not supported    —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards	Not used	
Connection to projector	IP address	Only fixed IP address supported	
	WEB control screen login	User name	admin1* <sup>1</sup>
		Password	panasonic* <sup>2</sup>
	Content Manager login	User name	admin1* <sup>1</sup>
Password		panasonic* <sup>3</sup>	
Projector settings	Network standby	—	
	Network control		
	WEB control	ON	
	Command control	—	
	WEB port / Command port	—	
	PJLink control	ON	
	ECO management		
Standby mode	—		
	Standby mode	Normal* <sup>4</sup>	
Functions	Monitoring and control functions	Auto search (local network) function	○
		Device status monitoring function (Simplified)	○
		Device location information registering function (Map monitoring function)	○
		Command transmission function	○
		Simultaneous image distribution function	○
		Distribution image deletion function	○
		Interrupting delivery function	○
		Brightness control function	×
		ECO management function	○
		Signage schedule acquisition and delivery functions	○
		Maintenance log save function	○
		Contents list delivery function	×
		ECO Power Level Monitor Function	×
		Wireless settings display function	○
	Light ID control function	×	
	Early warning function (paid)	Status monitoring function (Details)	○
		Error, warning, and notification guidance displays function	○
		Basic control functions (power, Shutter / AV muting)	○
		Fan failure prediction function	○
		Filter clog prediction	×
		Maintenance prediction function	○
		Temperature information graph display function	○
		Voltage information graph display function	×
Display of WEB control screen for devices function		○	
System log acquisition (automatic acquisition only when error, warning, or notification occurs)	○		
Stopped camera image detecting function	○		

\*1: This is the user name provided at the time of shipment.

\*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

\*3: This is the password provided at the time of shipment. Use the same password as for Content Manager supplied with the projector.

\*4: When set to "Network" or "ECO", information acquisition and control will be disabled.

## ■ NTN91001 / NTN91000

## ■ PT-JW130F / PT-JW130G / PT-JW130H

The letters\* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

\* Alphabet letters at end (place of destination: D/E/K/T/U, cabinet color: B/W)

Model group: **Rich information model**

○: Supported X: Not supported —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards	Not used	
Connection to projector	IP address	Only fixed IP address supported	
	WEB control screen login	User name	admin1* <sup>1</sup>
		Password	panasonic* <sup>2</sup>
	Content Manager login	User name	admin1* <sup>1</sup>
Password		panasonic* <sup>3</sup>	
Projector settings	Network standby	—	
	Network control		
	WEB control	ON	
	Command control	—	
	WEB port / Command port	—	
	PJLink control	ON	
	ECO management		
Standby mode	—		
Standby mode		Normal* <sup>4</sup>	
Functions	Monitoring and control functions	Auto search (local network) function	○
		Device status monitoring function (Simplified)	○
		Device location information registering function (Map monitoring function)	○
		Command transmission function	○
		Simultaneous image distribution function	○
		Distribution image deletion function	○
		Interrupting delivery function	○
		Brightness control function	X
		ECO management function	○
		Signage schedule acquisition and delivery functions	○
		Maintenance log save function	X
		Contents list delivery function	X
		ECO Power Level Monitor Function	X
		Wireless settings display function	○
	Light ID control function	X	
	Early warning function (paid)	Status monitoring function (Details)	○
		Error, warning, and notification guidance displays function	○
		Basic control functions (power, Shutter / AV muting)	○
		Fan failure prediction function	○
		Filter clog prediction	X
		Maintenance prediction function	○
		Temperature information graph display function	○
		Voltage information graph display function	X
Display of WEB control screen for devices function		○	
System log acquisition (automatic acquisition only when error, warning, or notification occurs)	X		
Stopped camera image detecting function	○		

\*1: This is the user name provided at the time of shipment.

\*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

\*3: This is the password provided at the time of shipment. Use the same password as for Content Manager supplied with the projector.

\*4: When set to "Network" or "ECO", information acquisition and control will be disabled.

## ET-YFB200

The letters\* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

\* Alphabet letters at end (place of destination: G/(blank))

○: Supported    ×: Not supported    —: Not available

		Setting / compatibility
Connection to DIGITAL LINK Switcher	IP address	Only fixed IP address supported
	User name	admin1*1
	Password	panasonic*2
DIGITAL LINK Switcher settings	Network standby	—
	Network control	—
	WEB control	ON
	WEB port / Command port	1024
	PJLink control	ON
Functions	DIGITAL LINK Switcher I/O status display	○
	Fan status display	○
	WEB control screen display	×

\*1: This is the user name provided at the time of shipment. Connect using a user with administrator privileges.

\*2: This is the password provided at the time of shipment. The password is identical to that used for WEB control of the DIGITAL LINK switcher unit.