

## List of Compatible Device Models

### Multi Monitoring & Control Software 3.0

- As of October 2019 -

In using this software, bear in mind that the items whose settings must be selected for the projectors and the functions that can be used may differ from one projector model to another. While referring to the table below, check out that projector models are compatible with the software before using them.

■ A list of compatible flat panel display models is available for download from the Panasonic website (<https://panasonic.net/cns/prodisplays/download/software/>).

#### List of device models

##### ■ Projector\*1

NTN91000*2	55	PT-DW730	23
NTN91001*2	55	PT-DW740	22
NTN91002*2	54	PT-DW750	12
NTN91003*2	54	PT-DW830	12
PT-D10000*3	25	PT-DW8300	21
PT-D12000	20	PT-DW90XE*3	21
PT-D3500*3	27	PT-DX100	12
PT-D4000	27	PT-DX500	24
PT-D5000	23	PT-DX610	22
PT-D5600*3	27	PT-DX800	23
PT-D5700	27	PT-DX810	22
PT-D6000	23	PT-DX820	12
PT-D7700*3	26	PT-DZ10K	11
PT-DS100XE*3	21	PT-DZ110XE*3	21
PT-DS12K	11	PT-DZ12000	20
PT-DS20K	11	PT-DZ13K	11
PT-DS20K2	10	PT-DZ16K	11
PT-DS8500	21	PT-DZ16K2	10
PT-DW100	20	PT-DZ21K	11
PT-DW10000*3	25	PT-DZ21K2	10
PT-DW105XEA*4	21	PT-DZ570	24
PT-DW11K	11	PT-DZ6700	23
PT-DW17K	11	PT-DZ6710	23
PT-DW17K2	10	PT-DZ680	22
PT-DW5000*3	27	PT-DZ770	22
PT-DW5100	27	PT-DZ780	12
PT-DW530	24	PT-DZ870	12
PT-DW6300	23	PT-DZ8700	21
PT-DW640	22	PT-EW530	31
PT-DW7000*3	26	PT-EW540	28

PT-EW550	29	PT-LB385*4	48
PT-EW551*4	30	PT-LB412	49
PT-EW630	31	PT-LB423	49
PT-EW640	28	PT-LB425	48
PT-EW650	29	PT-LB90NT	52
PT-EW651*4	30	PT-LW25H	51
PT-EW730	28	PT-LW280	50
PT-EX12K	32	PT-LW312	49
PT-EX16K	32	PT-LW330	50
PT-EX500	31	PT-LW333*4	49
PT-EX510*4	28	PT-LW335*4	48
PT-EX520*4	29	PT-LW362	49
PT-EX521*4	30	PT-LW373	49
PT-EX600	31	PT-LW375	48
PT-EX610	28	PT-LX26H	51
PT-EX620	29	PT-LX30H	51
PT-EX621*4	30	PT-LZ370	47
PT-EX800	28	PT-MW530	14
PT-EZ57*4	29	PT-MW630	14
PT-EZ570	31	PT-MW730	14
PT-EZ580	28	PT-MZ10K	13
PT-EZ590	29	PT-MZ13K	13
PT-EZ591*4	30	PT-MZ16K	13
PT-EZ770	28	PT-MZ570	14
PT-F100NT	46	PT-MZ670	14
PT-F200NT	46	PT-MZ770	14
PT-F300	45	PT-RCQ10	7
PT-F300NT	45	PT-RCQ80	7
PT-FW100NT	46	PT-RQ13K	6
PT-FW300	45	PT-RQ22K	7
PT-FW300NT	45	PT-RQ32K	6
PT-FW430	44	PT-RQ50K	5
PT-FW530	30	PT-RS11K	6
PT-FX400	44	PT-RS20K	7
PT-FX500*4	30	PT-RS30K	6
PT-FZ570	30	PT-RW330	19
PT-JW130F*4	55	PT-RW430	18
PT-JW130G*4	55	PT-RW620	8
PT-JW130H*4	55	PT-RW630	9
PT-JX200F*4	54	PT-RW730	8
PT-JX200G*4	54	PT-RW930	8
PT-JX200H*4	54	PT-RX110	8
PT-LB1	53	PT-RZ12K	6
PT-LB1V	53	PT-RZ120	7
PT-LB2	53	PT-RZ21K	7
PT-LB2V	53	PT-RZ31K	6
PT-LB3	53	PT-RZ370	19
PT-LB330	50	PT-RZ470	18
PT-LB332*4	49	PT-RZ475	17
PT-LB353*4	49	PT-RZ570	16
PT-LB355*4	48	PT-RZ575	16
PT-LB360	50	PT-RZ660	8
PT-LB382	49	PT-RZ670	9
PT-LB383	49	PT-RZ770	8

PT-RZ870	9	PT-VX45*4	38
PT-RZ970	8	PT-VX46*4	43
PT-ST10	53	PT-VX50*4	36
PT-TW230	51	PT-VX500	38
PT-TW231R	51	PT-VX501*4	38
PT-TW250*4	50	PT-VX505N	40
PT-TW340*4	50	PT-VX51*4	35
PT-TW341R	50	PT-VX510	38
PT-TW342*4	50	PT-VX60*4	36
PT-TW343R	50	PT-VX600*4	36
PT-TW350*4	49	PT-VX605N	34
PT-TW351R	49	PT-VX61*4	35
PT-TW370*4	48	PT-VX610	35
PT-TW371R	48	PT-VX615N	33
PT-TX310*4	50	PT-VZ470*4	37
PT-TX312*4	50	PT-VZ570*4	36
PT-TX320*4	49	PT-VZ575N	34
PT-TX340*4	48	PT-VZ580*4	35
PT-TX400*4	50	PT-VZ585N	33
PT-TX402*4	50	TH-D10000	25
PT-TX410*4	49	TH-D3500	27
PT-TX430*4	48	TH-D5600	27
PT-VMW50	15	TH-D7700	26
PT-VMW60*4	15	TH-DW10000	25
PT-VMZ40*4	15	TH-DW5000	27
PT-VMZ50	15	TH-DW7000	26
PT-VMZ60	15		
PT-VW330	39		
PT-VW340*4	42		
PT-VW345N	34		
PT-VW350*4	42		
PT-VW355N	34		
PT-VW360	41		
PT-VW430	38		
PT-VW431D	38		
PT-VW435N	40		
PT-VW440	38		
PT-VW530*4	36		
PT-VW535N	34		
PT-VW540*4	35		
PT-VW545N	33		
PT-VX400	39		
PT-VX400NT	40		
PT-VX405*4	38		
PT-VX406*4	43		
PT-VX41	39		
PT-VX410*4	42		
PT-VX415N	34		
PT-VX42*4	42		
PT-VX420*4	42		
PT-VX421*4	43		
PT-VX425N	34		
PT-VX430	41		
PT-VX431K	41		

\*1: Note on model groups

Devices are categorized into one of two groups depending on the type of information that can be accessed from them by the each software of the monitoring, control functions and the early warning function (paid).

The difference in the type of information that can be accessed for “rich information models” and “basic information models” is as follows.

○: Supported    ×: Not supported

Item	Model categorization based on accessible information difference	
	Rich information model	Basic information model
Group Name	○	○
IP Address	○	○
Shutter (AV Mute)	○	○
Model Name	○	○
Serial Number	○*	×
Selected input	○	○
Power	○	○
Selected LIGHT	○*	×
LIGHT Power / Operating mode	○	×
Signal Freq.	○	×
Main Version	○	×
Network Version	○*	×
Power on hours	○	○*
Temperature	○*	×
LIGHT status	○*	○*
Fan status	○*	×

\* May not be accessible depending on the device.

\*2: Model number of product sold in Japan. This will differ for products sold in other regions.

\*3: Model number of product sold in regions other than Japan. This will differ for products sold in Japan.

\*4: Not sold in Japan.

## Notes

The software is not compatible with any device models not appearing in this “Device model list.”

## Peripheral device list

### ■ Peripheral devices

#### DIGITAL LINK Switcher

ET-YFB200 ..... 56

#### Network camera

Panasonic BB-S Series, DG-S Series, WV-S Series, AW-UN70 Series, AW-HN130 Series, AW-HN40 Series, AW-HE130 Series, AW-HE40 Series, and AW-HR140 network cameras are supported. Allows the video shown on a display (projector or flat-panel display) to be checked remotely through a camera.

# PT-RQ50K

The letters\* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

\* Alphabet letters at end (place of destination: D/E/X/(blank))

Model group: **Rich information model**

○: Supported    ×: Not supported    —: Not available

		Setting / compatibility		
Optional accessories	Expansion boards		Not used	
Connection to projector	IP address		Only fixed IP address supported	
	WEB control screen login	User name	dispadmin*1	
		Password	@Panasonic*2	
	Content Manager login	User name	—	
Password		—		
Projector settings	Network standby		—	
	Network control			
		WEB control	ON	
		Command control	—	
		WEB port / Command port	1024	
		PJLink control	ON	
Functions	ECO management			
		Standby mode	—	
	Standby mode		Normal	
	Monitoring and control functions	Auto search (local network) function		○
		Device status monitoring function (Simplified)		○
		Device location information registering function (Map monitoring function)		○
		Command transmission function		○
		Simultaneous image distribution function		×
		Distribution image deletion function		×
		Interrupting delivery function		×
		Brightness control function		○
		ECO management function		×
		Signage schedule acquisition and delivery functions		×
		Maintenance log save function		○
		Contents list delivery function		×
		ECO Power Level Monitor Function		×
Wireless settings display function		×		
Light ID control function		×		
Remote Preview function		○		
Early warning function (paid)	Status monitoring function (Details)		○	
	Error, warning, and notification guidance displays function		○	
	Basic control functions (power, Shutter / AV muting)		○	
	Fan failure prediction function		○	
	Filter clog prediction		×	
	Maintenance prediction function		○	
	Temperature information graph display function		○	
	Voltage information graph display function		○	
	Display of WEB control screen for devices function		○	
	Maintenance log acquisition (automatic acquisition only when error, warning, or notification occurs)		○	
Stopped camera image detecting function		○		

\*1: This is the user name provided at the time of shipment.

\*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

■ PT-RQ32K / PT-RZ31K / PT-RS30K

■ PT-RQ13K / PT-RZ12K / PT-RS11K

The letters\* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

\* Alphabet letters at end (place of destination: A/D/E/J/T/U/(blank), lens: (blank)/L, cabinet color: B/K/W/(blank))

Model group: **Rich information model**

○: Supported X: Not supported —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards	Not used	
Connection to projector	IP address	Only fixed IP address supported	
	WEB control screen login	User name	admin1*1
		Password	panasonic*2
	Content Manager login	User name	—
		Password	—
Projector settings	Network standby	—	
	Network control		
	WEB control	ON	
	Command control	—	
	WEB port / Command port	1024	
	PJLink control	ON	
	ECO management		
Standby mode	—		
Standby mode		Normal	
Functions	Monitoring and control functions	Auto search (local network) function	○
		Device status monitoring function (Simplified)	○
		Device location information registering function (Map monitoring function)	○
		Command transmission function	○
		Simultaneous image distribution function	X
		Distribution image deletion function	X
		Interrupting delivery function	X
		Brightness control function	○
		ECO management function	X
		Signage schedule acquisition and delivery functions	X
		Maintenance log save function	○
		Contents list delivery function	X
		ECO Power Level Monitor Function	X
		Wireless settings display function	X
		Light ID control function	X
	Remote Preview function	X	
	Early warning function (paid)	Status monitoring function (Details)	○
		Error, warning, and notification guidance displays function	○
		Basic control functions (power, Shutter / AV muting)	○
		Fan failure prediction function	○
		Filter clog prediction	X
		Maintenance prediction function	○
		Temperature information graph display function	○
		Voltage information graph display function	○
		Display of WEB control screen for devices function	○
System log acquisition (automatic acquisition only when error, warning, or notification occurs)		○	
Stopped camera image detecting function	○		

\*1: This is the user name provided at the time of shipment.

\*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

■ PT-RCQ10 / PT-RCQ80

■ PT-RQ22K / PT-RZ21K / PT-RS20K

■ PT-RZ120

The letters\* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

\* Alphabet letters at end (place of destination: A/D/E/J/T/U/X/(blank), lens: (blank)/L, cabinet color: B/K/W/(blank))

Model group: **Rich information model**

○: Supported X: Not supported —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards	Not used	
Connection to projector	IP address	Only fixed IP address supported	
	WEB control screen login	User name	dispadmin*1
		Password	@Panasonic*2
	Content Manager login	User name	—
Password		—	
Projector settings	Network standby	—	
	Network control		
	WEB control	ON	
	Command control	—	
	WEB port / Command port	1024	
	PJLink control	ON	
ECO management	Standby mode	—	
	Standby mode	Normal	
Functions	Monitoring and control functions	Auto search (local network) function	○
		Device status monitoring function (Simplified)	○
		Device location information registering function (Map monitoring function)	○
		Command transmission function	○
		Simultaneous image distribution function	X
		Distribution image deletion function	X
		Interrupting delivery function	X
		Brightness control function	○
		ECO management function	X
		Signage schedule acquisition and delivery functions	X
		Maintenance log save function	○
		Contents list delivery function	X
		ECO Power Level Monitor Function	X
	Wireless settings display function	X	
	Light ID control function	X	
	Remote Preview function	X	
	Early warning function (paid)	Status monitoring function (Details)	○
		Error, warning, and notification guidance displays function	○
		Basic control functions (power, Shutter / AV muting)	○
		Fan failure prediction function	○
Filter clog prediction		X	
Maintenance prediction function		○	
Temperature information graph display function		○	
Voltage information graph display function		○	
Display of WEB control screen for devices function		○	
Maintenance log acquisition (automatic acquisition only when error, warning, or notification occurs)	○		
Stopped camera image detecting function	○		

\*1: This is the user name provided at the time of shipment.

\*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

**PT-RZ970 / PT-RW930 / PT-RX110 / PT-RZ770 / PT-RW730 / PT-RZ660 / PT-RW620**

The letters\* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

\* Alphabet letters at end (place of destination: A/D/E/J/T/U/(blank), lens: (blank)/L, cabinet color: B/K/W/(blank))

Model group: **Rich information model**

○: Supported X: Not supported —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards	Not used	
Connection to projector	IP address	Only fixed IP address supported	
	WEB control screen login	User name	admin1* <sup>1</sup>
		Password	panasonic* <sup>2</sup>
	Content Manager login	User name	—
Password		—	
Projector settings	Network standby	—	
	Network control		
	WEB control	ON	
	Command control	—	
	WEB port / Command port	1024	
	PJLink control	ON	
	ECO management		
Standby mode	—		
Standby mode		Normal	
Functions	Monitoring and control functions	Auto search (local network) function	○
		Device status monitoring function (Simplified)	○
		Device location information registering function (Map monitoring function)	○
		Command transmission function	○
		Simultaneous image distribution function	X
		Distribution image deletion function	X
		Interrupting delivery function	X
		Brightness control function	○
		ECO management function	X
		Signage schedule acquisition and delivery functions	X
		Maintenance log save function	○
		Contents list delivery function	X
		ECO Power Level Monitor Function	X
		Wireless settings display function	X
	Light ID control function	X	
	Remote Preview function	X	
	Early warning function (paid)	Status monitoring function (Details)	○
		Error, warning, and notification guidance displays function	○
		Basic control functions (power, Shutter / AV muting)	○
		Fan failure prediction function	○
		Filter clog prediction	X
		Maintenance prediction function	○
		Temperature information graph display function	○
Voltage information graph display function		X	
Display of WEB control screen for devices function		○	
System log acquisition (automatic acquisition only when error, warning, or notification occurs)		○	
Stopped camera image detecting function	○		

\*1: This is the user name provided at the time of shipment.

\*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.



■ PT-RZ670 / PT-RW630

■ PT-RZ870

The letters\* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

\* Alphabet letters at end (place of destination: A/D/E/J/T/U/(blank), lens: (blank)/L, cabinet color: B/K/W/(blank))

Model group: **Rich information model**

○: Supported X: Not supported —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards	Not used	
Connection to projector	IP address	Only fixed IP address supported	
	WEB control screen login	User name	admin1*1
		Password	panasonic*2
	Content Manager login	User name	—
		Password	—
Projector settings	Network standby	—	
	Network control		
	WEB control	ON	
	Command control	—	
	WEB port / Command port	1024	
	PJLink control	ON	
	ECO management		
Standby mode	—		
Standby mode		Normal	
Functions	Monitoring and control functions	Auto search (local network) function	○
		Device status monitoring function (Simplified)	○
		Device location information registering function (Map monitoring function)	○
		Command transmission function	○
		Simultaneous image distribution function	X
		Distribution image deletion function	X
		Interrupting delivery function	X
		Brightness control function	○
		ECO management function	X
		Signage schedule acquisition and delivery functions	X
		Maintenance log save function	○
		Contents list delivery function	X
		ECO Power Level Monitor Function	X
		Wireless settings display function	X
		Light ID control function	X
	Remote Preview function	X	
	Early warning function (paid)	Status monitoring function (Details)	○
		Error, warning, and notification guidance displays function	○
		Basic control functions (power, Shutter / AV muting)	○
		Fan failure prediction function	○
		Filter clog prediction	X
		Maintenance prediction function	○
		Temperature information graph display function	○
		Voltage information graph display function	X
		Display of WEB control screen for devices function	○
System log acquisition (automatic acquisition only when error, warning, or notification occurs)		○	
Stopped camera image detecting function	○		

\*1: This is the user name provided at the time of shipment.

\*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

## PT-DZ21K2 / PT-DS20K2 / PT-DW17K2 / PT-DZ16K2

The letters\* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

\* Alphabet letters at end (place of destination: A/D/E/J/T/U/(blank), lens: (blank)/L, cabinet color: B/K/W/(blank))

Model group: **Rich information model**

○: Supported X: Not supported —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards	Not used	
Connection to projector	IP address	Only fixed IP address supported	
	WEB control screen login	User name	admin1* <sup>1</sup>
		Password	panasonic* <sup>2</sup>
	Content Manager login	User name	—
Password		—	
Projector settings	Network standby	—	
	Network control		
	WEB control	ON	
	Command control	—	
	WEB port / Command port	1024	
	PJLink control	ON	
	ECO management		
Standby mode	—		
Standby mode		Normal	
Functions	Monitoring and control functions	Auto search (local network) function	○
		Device status monitoring function (Simplified)	○
		Device location information registering function (Map monitoring function)	○
		Command transmission function	○
		Simultaneous image distribution function	X
		Distribution image deletion function	X
		Interrupting delivery function	X
		Brightness control function	○
		ECO management function	X
		Signage schedule acquisition and delivery functions	X
		Maintenance log save function	○
		Contents list delivery function	X
		ECO Power Level Monitor Function	X
		Wireless settings display function	X
	Light ID control function	X	
	Remote Preview function	X	
	Early warning function (paid)	Status monitoring function (Details)	○
		Error, warning, and notification guidance displays function	○
		Basic control functions (power, Shutter / AV muting)	○
		Fan failure prediction function	○
		Filter clog prediction	X
		Maintenance prediction function	○
		Temperature information graph display function	○
Voltage information graph display function		○	
Display of WEB control screen for devices function		○	
System log acquisition (automatic acquisition only when error, warning, or notification occurs)		○	
Stopped camera image detecting function	○		

\*1: This is the user name provided at the time of shipment.

\*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

■ PT-DZ21K / PT-DS20K / PT-DW17K / PT-DZ16K

■ PT-DZ13K / PT-DS12K / PT-DW11K / PT-DZ10K

The letters\* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

\* Alphabet letters at end (place of destination: A/D/E/J/T/U/(blank), lens: (blank)/L, cabinet color: B/K/W/(blank))

Model group: **Rich information model**

○: Supported X: Not supported —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards	Not used	
Connection to projector	IP address	Only fixed IP address supported	
	WEB control screen login	User name	admin1*1
		Password	panasonic*2
	Content Manager login	User name	—
Password		—	
Projector settings	Network standby	—	
	Network control		
	WEB control	ON	
	Command control	—	
	WEB port / Command port	1024	
	PJLink control	ON	
	ECO management		
Standby mode	—		
Standby mode		Normal	
Functions	Monitoring and control functions	Auto search (local network) function	○
		Device status monitoring function (Simplified)	○
		Device location information registering function (Map monitoring function)	○
		Command transmission function	○
		Simultaneous image distribution function	X
		Distribution image deletion function	X
		Interrupting delivery function	X
		Brightness control function	○
		ECO management function	X
		Signage schedule acquisition and delivery functions	X
		Maintenance log save function	○
		Contents list delivery function	X
		ECO Power Level Monitor Function	X
		Wireless settings display function	X
	Light ID control function	X	
	Remote Preview function	X	
	Early warning function (paid)	Status monitoring function (Details)	○
		Error, warning, and notification guidance displays function	○
		Basic control functions (power, Shutter / AV muting)	○
		Fan failure prediction function	○
		Filter clog prediction	X
		Maintenance prediction function	○
		Temperature information graph display function	○
Voltage information graph display function		X	
Display of WEB control screen for devices function		○	
System log acquisition (automatic acquisition only when error, warning, or notification occurs)	○		
Stopped camera image detecting function	○		

\*1: This is the user name provided at the time of shipment.

\*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

■ PT-DZ870 / PT-DW830 / PT-DX100

■ PT-DZ780 / PT-DW750 / PT-DX820

The letters\* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

\* Alphabet letters at end (place of destination: A/D/E/J/T/U/(blank), lens: (blank)/L, cabinet color: B/K/W/(blank))

Model group: **Rich information model**

○: Supported X: Not supported —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards	Not used	
Connection to projector	IP address	Only fixed IP address supported	
	WEB control screen login	User name	admin1*1
		Password	panasonic*2
	Content Manager login	User name	—
Password		—	
Projector settings	Network standby	—	
	Network control		
	WEB control	ON	
	Command control	—	
	WEB port / Command port	1024	
	PJLink control	ON	
	ECO management		
Standby mode	—		
Standby mode		Normal	
Functions	Monitoring and control functions	Auto search (local network) function	○
		Device status monitoring function (Simplified)	○
		Device location information registering function (Map monitoring function)	○
		Command transmission function	○
		Simultaneous image distribution function	X
		Distribution image deletion function	X
		Interrupting delivery function	X
		Brightness control function	○
		ECO management function	X
		Signage schedule acquisition and delivery functions	X
		Maintenance log save function	○
		Contents list delivery function	X
		ECO Power Level Monitor Function	X
		Wireless settings display function	X
	Light ID control function	X	
	Remote Preview function	X	
	Early warning function (paid)	Status monitoring function (Details)	○
		Error, warning, and notification guidance displays function	○
		Basic control functions (power, Shutter / AV muting)	○
		Fan failure prediction function	○
		Filter clog prediction	X
		Maintenance prediction function	○
		Temperature information graph display function	○
Voltage information graph display function		X	
Display of WEB control screen for devices function		○	
System log acquisition (automatic acquisition only when error, warning, or notification occurs)		○	
Stopped camera image detecting function	○		

\*1: This is the user name provided at the time of shipment.

\*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

## PT-MZ16K / PT-MZ13K / PT-MZ10K

The letters\* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

\* Alphabet letters at end (place of destination: D/E/J/X/(blank), lens: L, cabinet color: B/W)

Model group: **Rich information model**

○: Supported X: Not supported —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards	Not used	
Connection to projector	IP address	Only fixed IP address supported	
	WEB control screen login	User name	dispadmin*1
		Password	@Panasonic*2
	Content Manager login	User name	—
Password		—	
Projector settings	Network standby	—	
	Network control		
	WEB control	ON	
	Command control	—	
	WEB port / Command port	1024	
	PJLink control	ON	
ECO management			
Standby mode	—		
Standby mode		Normal	
Functions	Monitoring and control functions	Auto search (local network) function	○
		Device status monitoring function (Simplified)	○
		Device location information registering function (Map monitoring function)	○
		Command transmission function	○
		Simultaneous image distribution function	X
		Distribution image deletion function	X
		Interrupting delivery function	X
		Brightness control function	X
		ECO management function	X
		Signage schedule acquisition and delivery functions	X
		Maintenance log save function	○
		Contents list delivery function	X
		ECO Power Level Monitor Function	X
		Wireless settings display function	X
	Light ID control function	X	
	Remote Preview function	X	
	Early warning function (paid)	Status monitoring function (Details)	○
		Error, warning, and notification guidance displays function	○
		Basic control functions (power, Shutter / AV muting)	○
		Fan failure prediction function	○
		Filter clog prediction	X
		Maintenance prediction function	○
		Temperature information graph display function	○
Voltage information graph display function		○	
Display of WEB control screen for devices function		○	
Maintenance log acquisition (automatic acquisition only when error, warning, or notification occurs)		○	
Stopped camera image detecting function	○		

\*1: This is the user name provided at the time of shipment.

\*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

■ PT-MZ670 / PT-MW630 / PT-MZ570 / PT-MW530

■ PT-MZ770 / PT-MW730

The letters\* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

\* Alphabet letters at end (place of destination: A/D/J/(blank), lens: (blank)/L, cabinet color: (blank))

Model group: **Rich information model**

○: Supported X: Not supported —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards	Not used	
Connection to projector	IP address	Only fixed IP address supported	
	WEB control screen login	User name	dispadmin*1
		Password	@Panasonic*2
	Content Manager login	User name	—
		Password	—
Projector settings	Network standby	—	
	Network control		
	WEB control	ON	
	Command control	—	
	WEB port / Command port	1024	
	PJLink control	ON	
	ECO management		
Standby mode	—		
Standby mode		Normal	
Functions	Monitoring and control functions	Auto search (local network) function	○
		Device status monitoring function (Simplified)	○
		Device location information registering function (Map monitoring function)	○
		Command transmission function	○
		Simultaneous image distribution function	○
		Distribution image deletion function	○
		Interrupting delivery function	X
		Brightness control function	X
		ECO management function	○
		Signage schedule acquisition and delivery functions	X
		Maintenance log save function	○
		Contents list delivery function	○
		ECO Power Level Monitor Function	X
		Wireless settings display function	○*3
		Light ID control function	○
	Remote Preview function	X	
	Early warning function (paid)	Status monitoring function (Details)	○
		Error, warning, and notification guidance displays function	○
		Basic control functions (power, Shutter / AV muting)	○
		Fan failure prediction function	○
		Filter clog prediction	X
		Maintenance prediction function	○
		Temperature information graph display function	○
		Voltage information graph display function	X
		Display of WEB control screen for devices function	○
		Maintenance log acquisition (automatic acquisition only when error, warning, or notification occurs)	○
		Stopped camera image detecting function	○

\*1: This is the user name provided at the time of shipment.

\*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

\*3: Optional wireless module (ET-WM300) is required.

## PT-VMZ60 / PT-VMZ50 / PT-VMZ40 / PT-VMW60 / PT-VMW50

The letters\* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

\* Alphabet letters at end (place of destination: D/J/T/(blank), cabinet color: B/(blank))

Model group: **Rich information model**

○: Supported    ×: Not supported    —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards	Not used	
Connection to projector	IP address	Only fixed IP address supported	
	WEB control screen login	User name	dispadmin* <sup>1</sup>
		Password	@Panasonic* <sup>2</sup>
	Content Manager login	User name	—
		Password	—
Projector settings	Network standby	—	
	Network control		
	WEB control	ON	
	Command control	—	
	WEB port / Command port	—	
	PJLink control	ON	
	ECO management		
Standby mode	—		
Standby mode		Normal	
Functions	Monitoring and control functions	Auto search (local network) function	○
		Device status monitoring function (Simplified)	○
		Device location information registering function (Map monitoring function)	○
		Command transmission function	○
		Simultaneous image distribution function	×
		Distribution image deletion function	×
		Interrupting delivery function	×
		Brightness control function	×
		ECO management function	○
		Signage schedule acquisition and delivery functions	×
		Maintenance log save function	○
		Contents list delivery function	×
		ECO Power Level Monitor Function	×
		Wireless settings display function	×
		Light ID control function	×
	Remote Preview function	×	
	Early warning function (paid)	Status monitoring function (Details)	○
		Error, warning, and notification guidance displays function	○
		Basic control functions (power, Shutter / AV muting)	○
		Fan failure prediction function	○
		Filter clog prediction	×
		Maintenance prediction function	○
		Temperature information graph display function	○
		Voltage information graph display function	×
		Display of WEB control screen for devices function	○
		System log acquisition (automatic acquisition only when error, warning, or notification occurs)	○
		Stopped camera image detecting function	○

\*1: This is the user name provided at the time of shipment.

\*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

## PT-RZ575 / PT-RZ570

The letters\* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

\* Alphabet letters at end (place of destination: A/D/J/T/(blank), cabinet color: B/W)

Model group: **Rich information model**

○: Supported    ×: Not supported    —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards	Not used	
Connection to projector	IP address	Only fixed IP address supported	
	WEB control screen login	User name	admin1* <sup>1</sup>
		Password	panasonic* <sup>2</sup>
	Content Manager login	User name	—
Password		—	
Projector settings	Network standby	—	
	Network control		
	WEB control	ON	
	Command control	—	
	WEB port / Command port	—	
	PJLink control	ON	
	ECO management		
Standby mode	—		
Standby mode	Normal		
Functions	Monitoring and control functions	Auto search (local network) function	○
		Device status monitoring function (Simplified)	○
		Device location information registering function (Map monitoring function)	○
		Command transmission function	○
		Simultaneous image distribution function	×
		Distribution image deletion function	×
		Interrupting delivery function	×
		Brightness control function	○
		ECO management function	○
		Signage schedule acquisition and delivery functions	×
		Maintenance log save function	○
		Contents list delivery function	×
		ECO Power Level Monitor Function	×
		Wireless settings display function	×
	Light ID control function	×	
	Remote Preview function	×	
	Early warning function (paid)	Status monitoring function (Details)	○
		Error, warning, and notification guidance displays function	○
		Basic control functions (power, Shutter / AV muting)	○
		Fan failure prediction function	○
		Filter clog prediction	×
		Maintenance prediction function	○
		Temperature information graph display function	○
Voltage information graph display function		×	
Display of WEB control screen for devices function		○	
System log acquisition (automatic acquisition only when error, warning, or notification occurs)	○		
Stopped camera image detecting function	○		

\*1: This is the user name provided at the time of shipment.

\*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.



# PT-RZ475

The letters\* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

\* Alphabet letters at end (place of destination: E/EA/U/(blank))

Model group: **Rich information model**

○: Supported    ×: Not supported    —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards	Not used	
Connection to projector	IP address	Only fixed IP address supported	
	WEB control screen login	User name	admin1* <sup>1</sup>
		Password	panasonic* <sup>2</sup>
	Content Manager login	User name	—
Password		—	
Projector settings	Network standby	—	
	Network control		
	WEB control	ON	
	Command control	—	
	WEB port / Command port	—	
	PJLink control	ON	
ECO management			
Standby mode	—		
Standby mode		Normal	
Functions	Monitoring and control functions	Auto search (local network) function	○
		Device status monitoring function (Simplified)	○
		Device location information registering function (Map monitoring function)	○
		Command transmission function	○
		Simultaneous image distribution function	×
		Distribution image deletion function	×
		Interrupting delivery function	×
		Brightness control function	○* <sup>3</sup>
		ECO management function	○
		Signage schedule acquisition and delivery functions	×
		Maintenance log save function	○
		Contents list delivery function	×
		ECO Power Level Monitor Function	×
		Wireless settings display function	×
	Light ID control function	×	
	Remote Preview function	×	
	Early warning function (paid)	Status monitoring function (Details)	○
		Error, warning, and notification guidance displays function	○
		Basic control functions (power, Shutter / AV muting)	○
		Fan failure prediction function	×
		Filter clog prediction	×
		Maintenance prediction function	○
Temperature information graph display function		○	
Voltage information graph display function		×	
Display of WEB control screen for devices function		○	
System log acquisition (automatic acquisition only when error, warning, or notification occurs)		○	
Stopped camera image detecting function	○		

\*1: This is the user name provided at the time of shipment.

\*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

\*3: If the temperature of the projector's surroundings is elevated, light output may be reduced in order to protect the projector unit. If this software is used for the brightness control of multiple projectors, please ensure that as far as possible the temperature of the surroundings is the same for all projectors.

## PT-RZ470 / PT-RW430

The letters\* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

\* Alphabet letters at end (place of destination: E/EA/U/(blank), cabinet color: K/W/(blank))

Model group: **Rich information model**

○: Supported X: Not supported —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards	Not used	
Connection to projector	IP address	Only fixed IP address supported	
	WEB control screen login	User name	admin1* <sup>1</sup>
		Password	panasonic* <sup>2</sup>
	Content Manager login	User name	—
Password		—	
Projector settings	Network standby	—	
	Network control		
	WEB control	ON	
	Command control	—	
	WEB port / Command port	—	
	PJLink control	ON	
	ECO management		
Standby mode	—		
Standby mode	Normal		
Functions	Monitoring and control functions	Auto search (local network) function	○
		Device status monitoring function (Simplified)	○
		Device location information registering function (Map monitoring function)	○
		Command transmission function	○
		Simultaneous image distribution function	X
		Distribution image deletion function	X
		Interrupting delivery function	X
		Brightness control function	○* <sup>3</sup>
		ECO management function	○
		Signage schedule acquisition and delivery functions	X
		Maintenance log save function	○
		Contents list delivery function	X
		ECO Power Level Monitor Function	○
	Wireless settings display function	X	
	Light ID control function	X	
	Remote Preview function	X	
	Early warning function (paid)	Status monitoring function (Details)	○
		Error, warning, and notification guidance displays function	○
		Basic control functions (power, Shutter / AV muting)	○
		Fan failure prediction function	X
		Filter clog prediction	X
		Maintenance prediction function	○
		Temperature information graph display function	○
Voltage information graph display function		X	
Display of WEB control screen for devices function		○	
System log acquisition (automatic acquisition only when error, warning, or notification occurs)		○	
Stopped camera image detecting function	○		

\*1: This is the user name provided at the time of shipment.

\*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

\*3: If the temperature of the projector's surroundings is elevated, light output may be reduced in order to protect the projector unit. If this software is used for the brightness control of multiple projectors, please ensure that as far as possible the temperature of the surroundings is the same for all projectors.

## PT-RZ370 / PT-RW330

The letters\* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

\* Alphabet letters at end (place of destination: E/EA/U/(blank))

Model group: **Rich information model**

○: Supported    ×: Not supported    —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards	Not used	
Connection to projector	IP address	Only fixed IP address supported	
	WEB control screen login	User name	admin1* <sup>1</sup>
		Password	panasonic* <sup>2</sup>
	Content Manager login	User name	—
Password		—	
Projector settings	Network standby	—	
	Network control		
	WEB control	ON	
	Command control	—	
	WEB port / Command port	—	
	PJLink control	ON	
ECO management			
	Standby mode	—	
	Standby mode	Normal	
Functions	Monitoring and control functions	Auto search (local network) function	×
		Device status monitoring function (Simplified)	○
		Device location information registering function (Map monitoring function)	○
		Command transmission function	○
		Simultaneous image distribution function	×
		Distribution image deletion function	×
		Interrupting delivery function	×
		Brightness control function	×
		ECO management function	○
		Signage schedule acquisition and delivery functions	×
		Maintenance log save function	○
		Contents list delivery function	×
		ECO Power Level Monitor Function	○
		Wireless settings display function	×
	Light ID control function	×	
	Remote Preview function	×	
	Early warning function (paid)	Status monitoring function (Details)	○
		Error, warning, and notification guidance displays function	○
		Basic control functions (power, Shutter / AV muting)	○
		Fan failure prediction function	×
		Filter clog prediction	×
		Maintenance prediction function	○
		Temperature information graph display function	○
Voltage information graph display function		×	
Display of WEB control screen for devices function		○	
System log acquisition (automatic acquisition only when error, warning, or notification occurs)	○		
Stopped camera image detecting function	○		

\*1: This is the user name provided at the time of shipment.

\*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

# PT-DZ12000 / PT-D12000 / PT-DW100

The letters\* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

\* Alphabet letters at end (place of destination: E/U/(blank))

Model group: **Rich information model**

○: Supported    ×: Not supported    —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards	Not required (LAN terminal installed)*1	
Connection to projector	IP address	Only fixed IP address supported	
	WEB control screen login	User name	admin1*2
		Password	panasonic*3
	Content Manager login	User name	—
Password		—	
Projector settings	Network standby	ON	
	Network control		
	WEB control	ON	
	Command control	—	
	WEB port / Command port	1024	
	PJLink control	ON	
	ECO management		
Standby mode	—		
Functions	Monitoring and control functions	Auto search (local network) function	×
		Device status monitoring function (Simplified)	○
		Device location information registering function (Map monitoring function)	○
		Command transmission function	○
		Simultaneous image distribution function	×
		Distribution image deletion function	×
		Interrupting delivery function	×
		Brightness control function	×
		ECO management function	×
		Signage schedule acquisition and delivery functions	×
		Maintenance log save function	○
		Contents list delivery function	×
		ECO Power Level Monitor Function	×
		Wireless settings display function	×
		Light ID control function	×
	Remote Preview function	×	
	Early warning function (paid)	Status monitoring function (Details)	○
		Error, warning, and notification guidance displays function	○
		Basic control functions (power, Shutter / AV muting)	○
		Fan failure prediction function	×
		Filter clog prediction	×
		Maintenance prediction function	○
		Temperature information graph display function	○
Voltage information graph display function		×	
Display of WEB control screen for devices function	○		
System log acquisition (automatic acquisition only when error, warning, or notification occurs)	○		
Stopped camera image detecting function	○		

\*1: Of the commercially available expansion boards, the ET-MD77NT network board is not supported.

With expansion boards other than the ET-MD77NT, the network function on the expansion board side cannot be used (DVI, SDI, and other inputs are enabled).

The ET-MD100SD4 digital signal input board (for dual link HD-SDI) is supported.

\*2: This is the user name provided at the time of shipment.

\*3: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

**PT-DZ8700 / PT-DS8500 / PT-DW8300 / PT-DZ110XE / PT-DS100XE / PT-DW90XE / PT-DW105XEA**

The letters\* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

\* Alphabet letters at end (place of destination: E/U/(blank))

Model group: **Rich information model**

○: Supported    ×: Not supported    —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards	Not used	
Connection to projector	IP address	Only fixed IP address supported	
	WEB control screen login	User name	admin1*1
		Password	panasonic*2
	Content Manager login	User name	—
		Password	—
Projector settings	Network standby	—	
	Network control		
	WEB control	ON	
	Command control	—	
	WEB port / Command port	—	
	PJLink control	ON	
	ECO management		
Standby mode	—		
Functions	Standby mode	Normal	
	Auto search (local network) function	○	
	Device status monitoring function (Simplified)	○	
	Device location information registering function (Map monitoring function)	○	
	Command transmission function	○	
	Simultaneous image distribution function	×	
	Distribution image deletion function	×	
	Interrupting delivery function	×	
	Brightness control function	○	
	ECO management function	×	
	Signage schedule acquisition and delivery functions	×	
	Maintenance log save function	○	
	Contents list delivery function	×	
	ECO Power Level Monitor Function	×	
	Wireless settings display function	×	
	Light ID control function	×	
	Remote Preview function	×	
	Early warning function (paid)	Status monitoring function (Details)	○
		Error, warning, and notification guidance displays function	○
		Basic control functions (power, Shutter / AV muting)	○
		Fan failure prediction function	○
		Filter clog prediction	×
		Maintenance prediction function	○
Temperature information graph display function		○	
Voltage information graph display function		×	
Display of WEB control screen for devices function		○	
System log acquisition (automatic acquisition only when error, warning, or notification occurs)		○	
Stopped camera image detecting function	○		

\*1: This is the user name provided at the time of shipment.

\*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

■ PT-DZ770 / PT-DW740 / PT-DX810

■ PT-DZ680 / PT-DW640 / PT-DX610

The letters\* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

\* Alphabet letters at end (place of destination: E/U/(blank), cabinet color: K/S/(blank), lens: (blank)/L)

Model group: **Rich information model**

○: Supported X: Not supported —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards	Not used	
Connection to projector	IP address	Only fixed IP address supported	
	WEB control screen login	User name	admin1*1
		Password	panasonic*2
	Content Manager login	User name	—
		Password	—
Projector settings	Network standby	—	
	Network control		
	WEB control	ON	
	Command control	—	
	WEB port / Command port	—	
	PJLink control	ON	
	ECO management		
Standby mode	—		
Standby mode		Normal	
Functions	Monitoring and control functions	Auto search (local network) function	X
		Device status monitoring function (Simplified)	○
		Device location information registering function (Map monitoring function)	○
		Command transmission function	○
		Simultaneous image distribution function	X
		Distribution image deletion function	X
		Interrupting delivery function	X
		Brightness control function	X
		ECO management function	X
		Signage schedule acquisition and delivery functions	X
		Maintenance log save function	○
		Contents list delivery function	X
		ECO Power Level Monitor Function	X
		Wireless settings display function	X
		Light ID control function	X
	Remote Preview function	X	
	Early warning function (paid)	Status monitoring function (Details)	○
		Error, warning, and notification guidance displays function	○
		Basic control functions (power, Shutter / AV muting)	○
		Fan failure prediction function	○
		Filter clog prediction	X
		Maintenance prediction function	○
		Temperature information graph display function	○
		Voltage information graph display function	X
		Display of WEB control screen for devices function	○
System log acquisition (automatic acquisition only when error, warning, or notification occurs)		○	
Stopped camera image detecting function	○		

\*1: This is the user name provided at the time of shipment.

\*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

■ PT-DZ6710 / PT-DZ6700 / PT-DW6300 / PT-D6000 / PT-D5000

■ PT-DW730 / PT-DX800

The letters\* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

\* Alphabet letters at end (place of destination: E/U/(blank), cabinet color: K/S/(blank), lens: (blank)/L)

Model group: **Rich information model**

○: Supported X: Not supported —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards	Not used	
Connection to projector	IP address	Only fixed IP address supported	
	WEB control screen login	User name	admin1*1
		Password	panasonic*2
	Content Manager login	User name	—
		Password	—
Projector settings	Network standby	—	
	Network control		
	WEB control	ON	
	Command control	—	
	WEB port / Command port	—	
	PJLink control	ON	
	ECO management		
Standby mode	—		
Standby mode		Normal	
Functions	Monitoring and control functions	Auto search (local network) function	X
		Device status monitoring function (Simplified)	○
		Device location information registering function (Map monitoring function)	○
		Command transmission function	○
		Simultaneous image distribution function	X
		Distribution image deletion function	X
		Interrupting delivery function	X
		Brightness control function	X
		ECO management function	X
		Signage schedule acquisition and delivery functions	X
		Maintenance log save function	○
		Contents list delivery function	X
		ECO Power Level Monitor Function	X
		Wireless settings display function	X
		Light ID control function	X
		Remote Preview function	X
	Early warning function (paid)	Status monitoring function (Details)	○
		Error, warning, and notification guidance displays function	○
		Basic control functions (power, Shutter / AV muting)	○
		Fan failure prediction function	○
		Filter clog prediction	X
		Maintenance prediction function	○
		Temperature information graph display function	○
Voltage information graph display function		X	
Display of WEB control screen for devices function	○		
System log acquisition (automatic acquisition only when error, warning, or notification occurs)	○		
Stopped camera image detecting function	○		

\*1: This is the user name provided at the time of shipment.

\*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

# PT-DZ570 / PT-DW530 / PT-DX500

The letters\* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

\* Alphabet letters at end (place of destination: E/U/(blank))

Model group: **Rich information model**

○: Supported    ×: Not supported    —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards	Not used	
Connection to projector	IP address	Only fixed IP address supported	
	WEB control screen login	User name	admin1* <sup>1</sup>
		Password	panasonic* <sup>2</sup>
	Content Manager login	User name	—
Password		—	
Projector settings	Network standby	—	
	Network control		
	WEB control	ON	
	Command control	—	
	WEB port / Command port	—	
	PJLink control	ON	
	ECO management		
Standby mode	—		
Standby mode	Normal		
Functions	Monitoring and control functions	Auto search (local network) function	○
		Device status monitoring function (Simplified)	○
		Device location information registering function (Map monitoring function)	○
		Command transmission function	○
		Simultaneous image distribution function	○
		Distribution image deletion function	○
		Interrupting delivery function	×
		Brightness control function	×
		ECO management function	×
		Signage schedule acquisition and delivery functions	×
		Maintenance log save function	○
		Contents list delivery function	×
		ECO Power Level Monitor Function	×
		Wireless settings display function	×
	Light ID control function	×	
	Remote Preview function	×	
	Early warning function (paid)	Status monitoring function (Details)	○
		Error, warning, and notification guidance displays function	○
		Basic control functions (power, Shutter / AV muting)	○
		Fan failure prediction function	×
		Filter clog prediction	×
		Maintenance prediction function	○
		Temperature information graph display function	○
Voltage information graph display function		×	
Display of WEB control screen for devices function		○	
System log acquisition (automatic acquisition only when error, warning, or notification occurs)	○		
Stopped camera image detecting function	○		

\*1: This is the user name provided at the time of shipment.

\*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.



# TH-DW10000 / TH-D10000 / PT-DW10000 / PT-D10000

The letters\* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

\* Alphabet letters at end (place of destination: E/U)

Model group: **Rich information model**

○: Supported    ×: Not supported    —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards	Not required (LAN terminal installed)*1	
Connection to projector	IP address	Only fixed IP address supported	
	WEB control screen login	User name	user1
		Password	panasonic*2
	Content Manager login	User name	—
Password		—	
Projector settings	Network standby	—	
	Network control		
	WEB control	—	
	Command control	—	
	WEB port / Command port	—	
	PJLink control	—	
	ECO management		
Standby mode	—		
Functions	Standby mode	—	
	Auto search (local network) function	×	
	Device status monitoring function (Simplified)	○	
	Device location information registering function (Map monitoring function)	○	
	Command transmission function	○	
	Simultaneous image distribution function	×	
	Distribution image deletion function	×	
	Interrupting delivery function	×	
	Brightness control function	×	
	ECO management function	×	
	Signage schedule acquisition and delivery functions	×	
	Maintenance log save function	×	
	Contents list delivery function	×	
	ECO Power Level Monitor Function	×	
	Wireless settings display function	×	
	Light ID control function	×	
	Remote Preview function	×	
	Early warning function (paid)	Status monitoring function (Details)	○
		Error, warning, and notification guidance displays function	○
		Basic control functions (power, Shutter / AV muting)	○
Fan failure prediction function		×	
Filter clog prediction		×	
Maintenance prediction function		○	
Temperature information graph display function		○	
Voltage information graph display function		×	
Display of WEB control screen for devices function		○	
System log acquisition (automatic acquisition only when error, warning, or notification occurs)	×		
Stopped camera image detecting function	○		

\*1: Of the commercially available expansion boards, the ET-MD77NT network board is not supported.

With expansion boards other than the ET-MD77NT, the network function on the expansion board side cannot be used (DVI, SDI, and other inputs are enabled).

The ET-MD100SD4 digital signal input board (for dual link HD-SDI) is supported. (except for TH-D10000 and PT-D10000)

\*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

# TH-D7700 / TH-DW7000 / PT-D7700 / PT-DW7000

The letters\* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

\* Alphabet letters at end (place of destination: E/U, cabinet color: K/(blank))

Model group: **Rich information model**

○: Supported X: Not supported —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards	Expansion board required*1	
Connection to projector	IP address	Only fixed IP address supported	
	WEB control screen login	User name	user1
		Password	panasonic*2
	Content Manager login	User name	—
		Password	—
Projector settings	Network standby	—	
	Network control		
	WEB control	—	
	Command control	—	
	WEB port / Command port	—	
	PJLink control	—	
	ECO management		
Standby mode	—		
Functions	Standby mode	—	
	Auto search (local network) function	X	
	Device status monitoring function (Simplified)	○	
	Device location information registering function (Map monitoring function)	○	
	Command transmission function	○	
	Simultaneous image distribution function	X	
	Distribution image deletion function	X	
	Interrupting delivery function	X	
	Brightness control function	X	
	ECO management function	X	
	Signage schedule acquisition and delivery functions	X	
	Maintenance log save function	X	
	Contents list delivery function	X	
	ECO Power Level Monitor Function	X	
	Wireless settings display function	X	
	Light ID control function	X	
	Remote Preview function	X	
	Early warning function (paid)	Status monitoring function (Details)	○
		Error, warning, and notification guidance displays function	○
		Basic control functions (power, Shutter / AV muting)	○
		Fan failure prediction function	X
		Filter clog prediction	X
		Maintenance prediction function	○
Temperature information graph display function		○	
Voltage information graph display function		X	
Display of WEB control screen for devices function		○	
System log acquisition (automatic acquisition only when error, warning, or notification occurs)	X		
Stopped camera image detecting function	○		

\*1: One of the following commercially available expansion boards with a network function is required.

Network board: ET-MD77NT

Digital signal input board (for SD-SDI): ET-MD77SD1

Digital signal input board (for HD-SDI): ET-MD77SD3

Digital signal input board (for DVI): ET-MD77DV

\*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

■ PT-D5700 / PT-D4000 / PT-DW5100

■ TH-D5600 / PT-D5600 / TH-DW5000 / PT-DW5000

■ TH-D3500 / PT-D3500

The letters\* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

\* Alphabet letters at end (place of destination: E/U/(blank), lens: (blank)/L)

Model group: **Rich information model**

○: Supported    ×: Not supported    —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards	Not used	
Connection to projector	IP address	Only fixed IP address supported	
	WEB control screen login	User name	user1
		Password	panasonic*1
	Content Manager login	User name	—
Password		—	
Projector settings	Network standby	—	
	Network control		
	WEB control	—	
	Command control	—	
	WEB port / Command port	—	
	PJLink control	—	
ECO management	Standby mode	—	
	Standby mode	—	
Functions	Monitoring and control functions	Auto search (local network) function	×
		Device status monitoring function (Simplified)	○
		Device location information registering function (Map monitoring function)	○
		Command transmission function	○
		Simultaneous image distribution function	×
		Distribution image deletion function	×
		Interrupting delivery function	×
		Brightness control function	×
		ECO management function	×
		Signage schedule acquisition and delivery functions	×
		Maintenance log save function	×
		Contents list delivery function	×
		ECO Power Level Monitor Function	×
	Wireless settings display function	×	
	Light ID control function	×	
	Remote Preview function	×	
	Early warning function (paid)	Status monitoring function (Details)	○
		Error, warning, and notification guidance displays function	○
		Basic control functions (power, Shutter / AV muting)	○
		Fan failure prediction function	×
Filter clog prediction		×	
Maintenance prediction function		○	
Temperature information graph display function		○	
Voltage information graph display function		×	
Display of WEB control screen for devices function		○	
System log acquisition (automatic acquisition only when error, warning, or notification occurs)	×		
Stopped camera image detecting function	○		

\*1: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

■ PT-EZ770 / PT-EW730 / PT-EX800

■ PT-EZ580 / PT-EW640 / PT-EW540 / PT-EX610 / PT-EX510

The letters\* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

\* Alphabet letters at end (place of destination: A/D/J/K/T/Z/(blank), lens: (blank)/L)

Model group: **Rich information model**

○: Supported X: Not supported —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards	Not used	
Connection to projector	IP address	Only fixed IP address supported	
	WEB control screen login	User name	admin1*1
		Password	panasonic*2
	Content Manager login	User name	—
Password		—	
Projector settings	Network standby	—	
	Network control		
	WEB control	ON	
	Command control	—	
	WEB port / Command port	—	
	PJLink control	ON	
	ECO management		
Standby mode	—		
Standby mode		Normal	
Functions	Monitoring and control functions	Auto search (local network) function	X
		Device status monitoring function (Simplified)	○
		Device location information registering function (Map monitoring function)	○
		Command transmission function	○
		Simultaneous image distribution function	X
		Distribution image deletion function	X
		Interrupting delivery function	X
		Brightness control function	X
		ECO management function	○
		Signage schedule acquisition and delivery functions	X
		Maintenance log save function	○
		Contents list delivery function	X
		ECO Power Level Monitor Function	X
	Wireless settings display function	X	
	Light ID control function	X	
	Remote Preview function	X	
	Early warning function (paid)	Status monitoring function (Details)	○
		Error, warning, and notification guidance displays function	○
		Basic control functions (power, Shutter / AV muting)	○
		Fan failure prediction function	○
		Filter clog prediction	X
		Maintenance prediction function	○
		Temperature information graph display function	○
Voltage information graph display function		X	
Display of WEB control screen for devices function		○	
System log acquisition (automatic acquisition only when error, warning, or notification occurs)		○	
Stopped camera image detecting function	○		

\*1: This is the user name provided at the time of shipment.

\*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

**PT-EZ590\*3 / PT-EW650\*3 / PT-EW550\*3 / PT-EX620\*3 / PT-EX520\*3 / PT-EZ57\*3**

The letters\* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

\* Alphabet letters at end (place of destination: D/J/K/T/(blank), lens: (blank)/L)

Model group: **Rich information model**

○: Supported    ×: Not supported    —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards	Not used	
Connection to projector	IP address	Only fixed IP address supported	
	WEB control screen login	User name	admin1*1
		Password	panasonic*2
	Content Manager login	User name	—
Password		—	
Projector settings	Network standby	—	
	Network control		
	WEB control	ON	
	Command control	—	
	WEB port / Command port	—	
	PJLink control	ON	
ECO management			
Standby mode	—		
Standby mode		Normal	
Functions	Monitoring and control functions	Auto search (local network) function	×
		Device status monitoring function (Simplified)	○
		Device location information registering function (Map monitoring function)	○
		Command transmission function	○
		Simultaneous image distribution function	×
		Distribution image deletion function	×
		Interrupting delivery function	×
		Brightness control function	×
		ECO management function	○
		Signage schedule acquisition and delivery functions	×
		Maintenance log save function	○
		Contents list delivery function	×
		ECO Power Level Monitor Function	×
		Wireless settings display function	×
	Light ID control function	×	
	Remote Preview function	×	
	Early warning function (paid)	Status monitoring function (Details)	○
		Error, warning, and notification guidance displays function	○
		Basic control functions (power, Shutter / AV muting)	○
		Fan failure prediction function	○
		Filter clog prediction	×
		Maintenance prediction function	○
		Temperature information graph display function	○
Voltage information graph display function		×	
Display of WEB control screen for devices function		○	
System log acquisition (automatic acquisition only when error, warning, or notification occurs)		○	
Stopped camera image detecting function	○		

\*1: This is the user name provided at the time of shipment.

\*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

\*3: Devices for which the main microcomputer version is below Ver.1.08 do not support the early warning function. You can check the version on the following page as [Projector Information] --> [Main Version] in the WEB control screen.

■ PT-EZ591 / PT-EW651 / PT-EW551 / PT-EX621 / PT-EX521

■ PT-FZ570\*3 / PT-FW530\*3 / PT-FX500\*3

The letters\* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

\* Alphabet letters at end (place of destination: D/J/K/T/(blank), lens: (blank)/L)

Model group: **Rich information model**

○: Supported X: Not supported —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards	Not used	
Connection to projector	IP address	Only fixed IP address supported	
	WEB control screen login	User name	admin1*1
		Password	panasonic*2
	Content Manager login	User name	—
		Password	—
Projector settings	Network standby	—	
	Network control		
	WEB control	ON	
	Command control	—	
	WEB port / Command port	—	
	PJLink control	ON	
	ECO management		
Standby mode	—		
Standby mode		Normal	
Functions	Monitoring and control functions	Auto search (local network) function	X
		Device status monitoring function (Simplified)	○
		Device location information registering function (Map monitoring function)	○
		Command transmission function	○
		Simultaneous image distribution function	X
		Distribution image deletion function	X
		Interrupting delivery function	X
		Brightness control function	X
		ECO management function	○
		Signage schedule acquisition and delivery functions	X
		Maintenance log save function	○
		Contents list delivery function	X
		ECO Power Level Monitor Function	X
		Wireless settings display function	X
		Light ID control function	X
	Remote Preview function	X	
	Early warning function (paid)	Status monitoring function (Details)	○
		Error, warning, and notification guidance displays function	○
		Basic control functions (power, Shutter / AV muting)	○
		Fan failure prediction function	○
		Filter clog prediction	X
		Maintenance prediction function	○
		Temperature information graph display function	○
Voltage information graph display function		X	
Display of WEB control screen for devices function		○	
System log acquisition (automatic acquisition only when error, warning, or notification occurs)	○		
Stopped camera image detecting function	○		

\*1: This is the user name provided at the time of shipment.

\*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

\*3: Devices for which the main microcomputer version is below Ver.1.08 do not support the early warning function. You can check the version on the following page as [Projector Information] --> [Main Version] in the WEB control screen.

# PT-EZ570 / PT-EW630 / PT-EW530 / PT-EX600 / PT-EX500

The letters\* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

\* Alphabet letters at end (place of destination: E/EA/U/(blank))

Model group: **Rich information model**

○: Supported    ×: Not supported    —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards	Not used	
Connection to projector	IP address	Only fixed IP address supported	
	WEB control screen login	User name	admin1*1
		Password	panasonic*2
	Content Manager login	User name	—
Password		—	
Projector settings	Network standby	—	
	Network control		
	WEB control	ON	
	Command control	—	
	WEB port / Command port	—	
	PJLink control	ON	
	ECO management		
Standby mode	—		
	Standby mode	Normal, Network	
Functions	Monitoring and control functions	Auto search (local network) function	×
		Device status monitoring function (Simplified)	○
		Device location information registering function (Map monitoring function)	○
		Command transmission function	○
		Simultaneous image distribution function	×
		Distribution image deletion function	×
		Interrupting delivery function	×
		Brightness control function	×
		ECO management function	○
		Signage schedule acquisition and delivery functions	×
		Maintenance log save function	○
		Contents list delivery function	×
		ECO Power Level Monitor Function	×
		Wireless settings display function	×
	Light ID control function	×	
	Remote Preview function	×	
	Early warning function (paid)	Status monitoring function (Details)	○
		Error, warning, and notification guidance displays function	○
		Basic control functions (power, Shutter / AV muting)	○
		Fan failure prediction function	×
		Filter clog prediction	×
		Maintenance prediction function	○
		Temperature information graph display function	○
Voltage information graph display function		×	
Display of WEB control screen for devices function		○	
System log acquisition (automatic acquisition only when error, warning, or notification occurs)	×		
Stopped camera image detecting function	○		

\*1: This is the user name provided at the time of shipment.

\*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

■ PT-EX16K

■ PT-EX12K

The letters\* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

\* Alphabet letters at end (place of destination: E/U/(blank))

Model group: **Rich information model**

○: Supported X: Not supported —: Not available

		Setting / compatibility		
Optional accessories	Expansion boards	Not used		
Connection to projector	IP address	Only fixed IP address supported		
	WEB control screen login	User name	admin1*1	
		Password	panasonic*2	
	Content Manager login	User name	—	
		Password	—	
Projector settings	Network standby	—		
	Network control			
	WEB control	ON		
	Command control	—		
	WEB port / Command port	—		
	PJLink control	ON		
	ECO management			
Standby mode	—			
Functions	Standby mode			
	Auto search (local network) function		X	
	Device status monitoring function (Simplified)		○	
	Device location information registering function (Map monitoring function)		○	
	Command transmission function		○	
	Simultaneous image distribution function		X	
	Distribution image deletion function		X	
	Interrupting delivery function		X	
	Brightness control function		X	
	ECO management function		X	
	Signage schedule acquisition and delivery functions		X	
	Maintenance log save function		○	
	Contents list delivery function		X	
	ECO Power Level Monitor Function		X	
	Wireless settings display function		X	
	Light ID control function		X	
	Remote Preview function		X	
	Early warning function (paid)	Status monitoring function (Details)		○
		Error, warning, and notification guidance displays function		○
		Basic control functions (power, Shutter / AV muting)		○
Fan failure prediction function		X		
Filter clog prediction		X		
Maintenance prediction function		○		
Temperature information graph display function		○		
Voltage information graph display function		X		
Display of WEB control screen for devices function		○		
System log acquisition (automatic acquisition only when error, warning, or notification occurs)		X		
Stopped camera image detecting function		○		

\*1: This is the user name provided at the time of shipment.

\*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.



## PT-VZ585N / PT-VW545N / PT-VX615N

The letters\* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

\* Alphabet letters at end (place of destination: D/J/T/(blank))

Model group: **Rich information model**

○: Supported    ×: Not supported    —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards		Not used
Connection to projector	IP address		Only fixed IP address supported
	WEB control screen login	User name	admin1* <sup>1</sup>
		Password	panasonic* <sup>2</sup>
	Content Manager login	User name	—
Password		—	
Projector settings	Network standby		—
	Network control		
		WEB control	ON
		Command control	—
		WEB port / Command port	—
		PJLink control	ON
		ECO management	
	Standby mode	Normal	
	Standby mode	—	
Functions	Monitoring and control functions	Auto search (local network) function	○
		Device status monitoring function (Simplified)	○
		Device location information registering function (Map monitoring function)	○
		Command transmission function	○
		Simultaneous image distribution function	○
		Distribution image deletion function	○
		Interrupting delivery function	×
		Brightness control function	×
		ECO management function	○
		Signage schedule acquisition and delivery functions	×
		Maintenance log save function	○
		Contents list delivery function	×
		ECO Power Level Monitor Function	×
		Wireless settings display function	○
	Light ID control function	×	
	Remote Preview function	×	
	Early warning function (paid)	Status monitoring function (Details)	○
		Error, warning, and notification guidance displays function	○
		Basic control functions (power, Shutter / AV muting)	○
		Fan failure prediction function	○
		Filter clog prediction	×
		Maintenance prediction function	○
		Temperature information graph display function	○
Voltage information graph display function		×	
Display of WEB control screen for devices function		○	
System log acquisition (automatic acquisition only when error, warning, or notification occurs)	×		
Stopped camera image detecting function	○		

\*1: This is the user name provided at the time of shipment.

\*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

■ PT-VZ575N / PT-VW535N / PT-VX605N

■ PT-VW355N / PT-VX425N

■ PT-VW345N / PT-VX415N

The letters\* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

\* Alphabet letters at end (place of destination: D/J/T/Z/(blank))

Model group: **Rich information model**

○: Supported X: Not supported —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards	Not used	
Connection to projector	IP address	Only fixed IP address supported	
	WEB control screen login	User name	admin1*1
		Password	panasonic*2
	Content Manager login	User name	—
Password		—	
Projector settings	Network standby	—	
	Network control	ON	
	WEB control	—	
	Command control	—	
	WEB port / Command port	—	
	PJLink control	—	
ECO management	Standby mode	—	
	Standby mode	Normal	
Functions	Monitoring and control functions	Auto search (local network) function	○
		Device status monitoring function (Simplified)	○
		Device location information registering function (Map monitoring function)	○
		Command transmission function	○
		Simultaneous image distribution function	○
		Distribution image deletion function	○
		Interrupting delivery function	X
		Brightness control function	X
		ECO management function	○
		Signage schedule acquisition and delivery functions	X
		Maintenance log save function	○
		Contents list delivery function	X
		ECO Power Level Monitor Function	X
	Wireless settings display function	○	
	Light ID control function	X	
	Remote Preview function	X	
	Early warning function (paid)	Status monitoring function (Details)	○
		Error, warning, and notification guidance displays function	○
		Basic control functions (power, Shutter / AV muting)	○
		Fan failure prediction function	X
Filter clog prediction		X	
Maintenance prediction function		○	
Temperature information graph display function		○	
Voltage information graph display function		X	
Display of WEB control screen for devices function		○	
System log acquisition (automatic acquisition only when error, warning, or notification occurs)	X		
Stopped camera image detecting function	○		

\*1: This is the user name provided at the time of shipment.

\*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

# PT-VZ580 / PT-VW540 / PT-VX610 / PT-VX61 / PT-VX51

The letters\* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

\* Alphabet letters at end (place of destination: D/J/K/K1/T/(blank))

Model group: **Rich information model**

○: Supported    ×: Not supported    —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards	Not used	
Connection to projector	IP address	Only fixed IP address supported	
	WEB control screen login	User name	admin1* <sup>1</sup>
		Password	panasonic* <sup>2</sup>
	Content Manager login	User name	—
Password		—	
Projector settings	Network standby	—	
	Network control		
	WEB control	ON	
	Command control	ON	
	WEB port / Command port	—	
	PJLink control	ON	
	ECO management		
Standby mode	—		
Standby mode	Normal		
Functions	Monitoring and control functions	Auto search (local network) function	×
		Device status monitoring function (Simplified)	○
		Device location information registering function (Map monitoring function)	○
		Command transmission function	○
		Simultaneous image distribution function	×
		Distribution image deletion function	×
		Interrupting delivery function	×
		Brightness control function	×
		ECO management function	○
		Signage schedule acquisition and delivery functions	×
		Maintenance log save function	○
		Contents list delivery function	×
		ECO Power Level Monitor Function	×
		Wireless settings display function	×
	Light ID control function	×	
	Remote Preview function	×	
	Early warning function (paid)	Status monitoring function (Details)	○
		Error, warning, and notification guidance displays function	○
		Basic control functions (power, Shutter / AV muting)	○
		Fan failure prediction function	○
		Filter clog prediction	×
		Maintenance prediction function	○
		Temperature information graph display function	○
Voltage information graph display function		×	
Display of WEB control screen for devices function		○	
System log acquisition (automatic acquisition only when error, warning, or notification occurs)		×	
Stopped camera image detecting function	○		

\*1: This is the user name provided at the time of shipment.

\*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

■ PT-VZ570 / PT-VW530 / PT-VX600

■ PT-VX60 / PT-VX50

The letters\* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

\* Alphabet letters at end (place of destination: D/T/(blank))

Model group: **Rich information model**

○: Supported X: Not supported —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards	Not used	
Connection to projector	IP address	Only fixed IP address supported	
	WEB control screen login	User name	admin1*1
		Password	panasonic*2
	Content Manager login	User name	—
Password		—	
Projector settings	Network standby	—	
	Network control	ON	
	WEB control	—	
	Command control	—	
	WEB port / Command port	—	
	PJLink control	—	
	ECO management		
Standby mode	—		
	Standby mode	Normal	
Functions	Monitoring and control functions	Auto search (local network) function	X
		Device status monitoring function (Simplified)	○
		Device location information registering function (Map monitoring function)	○
		Command transmission function	○
		Simultaneous image distribution function	X
		Distribution image deletion function	X
		Interrupting delivery function	X
		Brightness control function	X
		ECO management function	○
		Signage schedule acquisition and delivery functions	X
		Maintenance log save function	○
		Contents list delivery function	X
		ECO Power Level Monitor Function	X
		Wireless settings display function	X
	Light ID control function	X	
	Remote Preview function	X	
	Early warning function (paid)	Status monitoring function (Details)	○
		Error, warning, and notification guidance displays function	○
		Basic control functions (power, Shutter / AV muting)	○
		Fan failure prediction function	X
		Filter clog prediction	X
		Maintenance prediction function	○
		Temperature information graph display function	○
Voltage information graph display function		X	
Display of WEB control screen for devices function		○	
System log acquisition (automatic acquisition only when error, warning, or notification occurs)		X	
Stopped camera image detecting function	○		

\*1: This is the user name provided at the time of shipment.

\*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

# PT-VZ470

The letters\* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

\* Alphabet letters at end (place of destination: D/(blank))

Model group: **Rich information model**

○: Supported    ×: Not supported    —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards		Not used
Connection to projector	IP address		Only fixed IP address supported
	WEB control screen login	User name	admin1*1
		Password	panasonic*2
	Content Manager login	User name	—
Password		—	
Projector settings	Network standby		—
	Network control		ON
	WEB control		—
	Command control		—
	WEB port / Command port		—
	PJLink control		—
	ECO management		
	Standby mode	—	
	Standby mode	Normal	
Functions	Monitoring and control functions	Auto search (local network) function	×
		Device status monitoring function (Simplified)	○
		Device location information registering function (Map monitoring function)	○
		Command transmission function	○
		Simultaneous image distribution function	×
		Distribution image deletion function	×
		Interrupting delivery function	×
		Brightness control function	×
		ECO management function	○
		Signage schedule acquisition and delivery functions	×
		Maintenance log save function	○
		Contents list delivery function	×
		ECO Power Level Monitor Function	×
		Wireless settings display function	×
	Light ID control function	×	
	Remote Preview function	×	
	Early warning function (paid)	Status monitoring function (Details)	○
		Error, warning, and notification guidance displays function	○
		Basic control functions (power, Shutter / AV muting)	○
		Fan failure prediction function	○
		Filter clog prediction	×
		Maintenance prediction function	○
		Temperature information graph display function	○
Voltage information graph display function		×	
Display of WEB control screen for devices function		○	
System log acquisition (automatic acquisition only when error, warning, or notification occurs)		×	
Stopped camera image detecting function	○		

\*1: This is the user name provided at the time of shipment.

\*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

■ PT-VW440 / PT-VX510

■ PT-VW431D

■ PT-VW430 / PT-VX501 / PT-VX500 / PT-VX405 / PT-VX45

The letters\* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

\* Alphabet letters at end (place of destination: E/EA/KEA/U/(blank))

Model group: **Rich information model**

○: Supported    ×: Not supported    —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards	Not used	
Connection to projector	IP address	Only fixed IP address supported	
	WEB control screen login	User name	admin1*1
		Password	panasonic*2
	Content Manager login	User name	—
Password		—	
Projector settings	Network standby	—	
	Network control	ON	
	WEB control	—	
	Command control	—	
	WEB port / Command port	—	
	PJLink control	—	
	ECO management		
Standby mode	—		
	Standby mode	Network	
Functions	Monitoring and control functions	Auto search (local network) function	×
		Device status monitoring function (Simplified)	○
		Device location information registering function (Map monitoring function)	○
		Command transmission function	○
		Simultaneous image distribution function	×
		Distribution image deletion function	×
		Interrupting delivery function	×
		Brightness control function	×
		ECO management function	×
		Signage schedule acquisition and delivery functions	×
		Maintenance log save function	○
		Contents list delivery function	×
		ECO Power Level Monitor Function	×
		Wireless settings display function	×
	Light ID control function	×	
	Remote Preview function	×	
	Early warning function (paid)	Status monitoring function (Details)	○
		Error, warning, and notification guidance displays function	○
		Basic control functions (power, Shutter / AV muting)	○
		Fan failure prediction function	×
Filter clog prediction		×	
Maintenance prediction function		○	
Temperature information graph display function		○	
Voltage information graph display function		×	
Display of WEB control screen for devices function	○		
	System log acquisition (automatic acquisition only when error, warning, or notification occurs)	×	
	Stopped camera image detecting function	○	

\*1: This is the user name provided at the time of shipment.

\*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

# PT-VW330 / PT-VX400

# PT-VX41

The letters\* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

\* Alphabet letters at end (place of destination: E/EA/KEA/U/(blank))

Model group: **Rich information model**

○: Supported    ×: Not supported    —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards	Not used	
Connection to projector	IP address	Only fixed IP address supported	
	WEB control screen login	User name	admin1* <sup>1</sup>
		Password	panasonic* <sup>2</sup>
	Content Manager login	User name	—
		Password	—
Projector settings	Network standby	—	
	Network control	ON	
	WEB control	—	
	Command control	—	
	WEB port / Command port	—	
	PJLink control	—	
	ECO management	—	
Standby mode	—		
	Standby mode	Network	
Functions	Monitoring and control functions	Auto search (local network) function	×
		Device status monitoring function (Simplified)	○
		Device location information registering function (Map monitoring function)	○
		Command transmission function	○
		Simultaneous image distribution function	×
		Distribution image deletion function	×
		Interrupting delivery function	×
		Brightness control function	×
		ECO management function	×
		Signage schedule acquisition and delivery functions	×
		Maintenance log save function	○
		Contents list delivery function	×
		ECO Power Level Monitor Function	×
		Wireless settings display function	×
	Light ID control function	×	
	Remote Preview function	×	
	Early warning function (paid)	Status monitoring function (Details)	○
		Error, warning, and notification guidance displays function	○
		Basic control functions (power, Shutter / AV muting)	○
		Fan failure prediction function	×
Filter clog prediction		×	
Maintenance prediction function		○	
Temperature information graph display function		○	
Voltage information graph display function		×	
Display of WEB control screen for devices function	○		
System log acquisition (automatic acquisition only when error, warning, or notification occurs)	×		
Stopped camera image detecting function	○		

\*1: This is the user name provided at the time of shipment.

\*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

# PT-VW435N / PT-VX505N

# PT-VX400NT

The letters\* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

\* Alphabet letters at end (place of destination: E/EA/U/(blank))

Model group: **Rich information model**

○: Supported    ×: Not supported    —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards	Not used	
Connection to projector	IP address	Only fixed IP address supported	
	WEB control screen login	User name	admin1*1
		Password	panasonic*2
	Content Manager login	User name	—
		Password	—
Projector settings	Network standby	—	
	Network control	ON	
	WEB control	—	
	Command control	—	
	WEB port / Command port	—	
	PJLink control	—	
	ECO management	—	
Standby mode	—		
	Standby mode	Network	
Functions	Monitoring and control functions	Auto search (local network) function	○
		Device status monitoring function (Simplified)	○
		Device location information registering function (Map monitoring function)	○
		Command transmission function	○
		Simultaneous image distribution function	○
		Distribution image deletion function	○
		Interrupting delivery function	×
		Brightness control function	×
		ECO management function	×
		Signage schedule acquisition and delivery functions	×
		Maintenance log save function	○
		Contents list delivery function	×
		ECO Power Level Monitor Function	×
		Wireless settings display function	×
		Light ID control function	×
	Remote Preview function	×	
	Early warning function (paid)	Status monitoring function (Details)	○
		Error, warning, and notification guidance displays function	○
		Basic control functions (power, Shutter / AV muting)	○
		Fan failure prediction function	×
		Filter clog prediction	×
		Maintenance prediction function	○
		Temperature information graph display function	○
Voltage information graph display function		×	
Display of WEB control screen for devices function		○	
System log acquisition (automatic acquisition only when error, warning, or notification occurs)	×		
	Stopped camera image detecting function	○	

\*1: This is the user name provided at the time of shipment.

\*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.



# PT-VW360 / PT-VX430 / PT-VX431K

The letters\* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

\* Alphabet letters at end (place of destination: D/T/J/(blank))

Model group: **Rich information model**

○: Supported    ×: Not supported    —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards	Not used	
Connection to projector	IP address	Only fixed IP address supported	
	WEB control screen login	User name	dispadmin*1
		Password	@Panasonic*2
	Content Manager login	User name	—
Password		—	
Projector settings	Network standby	—	
	Network control	ON	
	WEB control	—	
	Command control	—	
	WEB port / Command port	—	
	PJLink control	—	
ECO management	Standby mode	—	
	Standby mode	Normal	
Functions	Monitoring and control functions	Auto search (local network) function	×
		Device status monitoring function (Simplified)	○
		Device location information registering function (Map monitoring function)	○
		Command transmission function	○
		Simultaneous image distribution function	×
		Distribution image deletion function	×
		Interrupting delivery function	×
		Brightness control function	×
		ECO management function	○
		Signage schedule acquisition and delivery functions	×
		Maintenance log save function	○
		Contents list delivery function	×
		ECO Power Level Monitor Function	×
		Wireless settings display function	×
	Light ID control function	×	
	Remote Preview function	×	
	Early warning function (paid)	Status monitoring function (Details)	○
		Error, warning, and notification guidance displays function	○
		Basic control functions (power, Shutter / AV muting)	○
		Fan failure prediction function	×
Filter clog prediction		×	
Maintenance prediction function		○	
Temperature information graph display function		○	
Voltage information graph display function		×	
Display of WEB control screen for devices function		○	
System log acquisition (automatic acquisition only when error, warning, or notification occurs)		×	
Stopped camera image detecting function	○		

\*1: This is the user name provided at the time of shipment.

\*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

■ PT-VW350 / PT-VX420

■ PT-VW340 / PT-VX410 / PT-VX42

The letters\* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

\* Alphabet letters at end (place of destination: D/EA/J/T/Z/(blank))

Model group: **Rich information model**

○: Supported X: Not supported —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards	Not used	
Connection to projector	IP address	Only fixed IP address supported	
	WEB control screen login	User name	admin1*1
		Password	panasonic*2
	Content Manager login	User name	—
		Password	—
Projector settings	Network standby	—	
	Network control	ON	
	WEB control	—	
	Command control	—	
	WEB port / Command port	—	
	PJLink control	—	
	ECO management		
Standby mode	—		
	Standby mode	Normal	
Functions	Monitoring and control functions	Auto search (local network) function	X
		Device status monitoring function (Simplified)	○
		Device location information registering function (Map monitoring function)	○
		Command transmission function	○
		Simultaneous image distribution function	X
		Distribution image deletion function	X
		Interrupting delivery function	X
		Brightness control function	X
		ECO management function	○
		Signage schedule acquisition and delivery functions	X
		Maintenance log save function	○
		Contents list delivery function	X
		ECO Power Level Monitor Function	X
		Wireless settings display function	X
		Light ID control function	X
	Remote Preview function	X	
	Early warning function (paid)	Status monitoring function (Details)	○
		Error, warning, and notification guidance displays function	○
		Basic control functions (power, Shutter / AV muting)	○
		Fan failure prediction function	X
		Filter clog prediction	X
		Maintenance prediction function	○
		Temperature information graph display function	○
		Voltage information graph display function	X
		Display of WEB control screen for devices function	○
		System log acquisition (automatic acquisition only when error, warning, or notification occurs)	X
		Stopped camera image detecting function	○

\*1: This is the user name provided at the time of shipment.

\*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

■ PT-VX421

■ PT-VX406 / PT-VX46

The letters\* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

\* Alphabet letters at end (place of destination: D/EA/J/T/Z/(blank))

Model group: **Rich information model**

○: Supported X: Not supported —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards	Not used	
Connection to projector	IP address	Only fixed IP address supported	
	WEB control screen login	User name	admin1*1
		Password	panasonic*2
	Content Manager login	User name	—
Password		—	
Projector settings	Network standby	—	
	Network control	ON	
	WEB control	—	
	Command control	—	
	WEB port / Command port	—	
	PJLink control	—	
	ECO management		
Standby mode	—		
	Standby mode	Normal	
Functions	Monitoring and control functions	Auto search (local network) function	X
		Device status monitoring function (Simplified)	○
		Device location information registering function (Map monitoring function)	○
		Command transmission function	○
		Simultaneous image distribution function	X
		Distribution image deletion function	X
		Interrupting delivery function	X
		Brightness control function	X
		ECO management function	○
		Signage schedule acquisition and delivery functions	X
		Maintenance log save function	○
		Contents list delivery function	X
		ECO Power Level Monitor Function	X
		Wireless settings display function	X
	Light ID control function	X	
	Remote Preview function	X	
	Early warning function (paid)	Status monitoring function (Details)	○
		Error, warning, and notification guidance displays function	○
		Basic control functions (power, Shutter / AV muting)	○
		Fan failure prediction function	X
		Filter clog prediction	X
		Maintenance prediction function	○
		Temperature information graph display function	○
Voltage information graph display function		X	
Display of WEB control screen for devices function		○	
System log acquisition (automatic acquisition only when error, warning, or notification occurs)		X	
Stopped camera image detecting function	○		

\*1: This is the user name provided at the time of shipment.

\*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

## PT-FW430 / PT-FX400

The letters\* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

\* Alphabet letters at end (place of destination: E/EA/U/(blank))

Model group: **Rich information model**

○: Supported    ×: Not supported    —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards	Not used	
Connection to projector	IP address	Only fixed IP address supported	
	WEB control screen login	User name	admin1* <sup>1</sup>
		Password	panasonic* <sup>2</sup>
	Content Manager login	User name	—
Password		—	
Projector settings	Network standby	—	
	Network control	ON	
	WEB control	—	
	Command control	—	
	WEB port / Command port	—	
	PJLink control	—	
	ECO management		
Standby mode	—		
Standby mode	Normal		
Functions	Monitoring and control functions	Auto search (local network) function	○
		Device status monitoring function (Simplified)	○
		Device location information registering function (Map monitoring function)	○
		Command transmission function	○
		Simultaneous image distribution function	○
		Distribution image deletion function	○
		Interrupting delivery function	×
		Brightness control function	×
		ECO management function	○
		Signage schedule acquisition and delivery functions	×
		Maintenance log save function	○
		Contents list delivery function	×
		ECO Power Level Monitor Function	×
		Wireless settings display function	×
	Light ID control function	×	
	Remote Preview function	×	
	Early warning function (paid)	Status monitoring function (Details)	○
		Error, warning, and notification guidance displays function	○
		Basic control functions (power, Shutter / AV muting)	○
		Fan failure prediction function	×
Filter clog prediction		×	
Maintenance prediction function		○	
Temperature information graph display function		○	
Voltage information graph display function		×	
Display of WEB control screen for devices function	○		
System log acquisition (automatic acquisition only when error, warning, or notification occurs)	×		
Stopped camera image detecting function	○		

\*1: This is the user name provided at the time of shipment.

\*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

## PT-FW300NT / PT-FW300 / PT-F300NT / PT-F300

The letters\* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

\* Alphabet letters at end (place of destination: E/EA/U/(blank))

Model group: **Rich information model**

○: Supported    ×: Not supported    —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards	Not used	
Connection to projector	IP address	Only fixed IP address supported	
	WEB control screen login	User name	admin1* <sup>1</sup>
		Password	panasonic* <sup>2</sup>
	Content Manager login	User name	—
Password		—	
Projector settings	Network standby	ON	
	Network control	ON	
	WEB control	—	
	Command control	—	
	WEB port / Command port	—	
	PJLink control	—	
	ECO management		
Standby mode	—		
Standby mode	—		
Functions	Monitoring and control functions	Auto search (local network) function	○
		Device status monitoring function (Simplified)	○
		Device location information registering function (Map monitoring function)	○
		Command transmission function	○
		Simultaneous image distribution function	○
		Distribution image deletion function	○
		Interrupting delivery function	×
		Brightness control function	×
		ECO management function	×
		Signage schedule acquisition and delivery functions	×
		Maintenance log save function	○
		Contents list delivery function	×
		ECO Power Level Monitor Function	×
		Wireless settings display function	×
	Light ID control function	×	
	Remote Preview function	×	
	Early warning function (paid)	Status monitoring function (Details)	○
		Error, warning, and notification guidance displays function	○
		Basic control functions (power, Shutter / AV muting)	○
		Fan failure prediction function	×
		Filter clog prediction	×
		Maintenance prediction function	○
		Temperature information graph display function	○
Voltage information graph display function		×	
Display of WEB control screen for devices function		○	
System log acquisition (automatic acquisition only when error, warning, or notification occurs)	×		
Stopped camera image detecting function	○		

\*1: This is the user name provided at the time of shipment.

\*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

# PT-FW100NT / PT-F100NT

# PT-F200NT

The letters\* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

\* Alphabet letters at end (place of destination: E/EA/U/(blank))

Model group: **Rich information model**

○: Supported    ×: Not supported    —: Not available

		Setting / compatibility		
Optional accessories	Expansion boards	Not used		
Connection to projector	IP address	Only fixed IP address supported		
	WEB control screen login	User name	user1	
		Password	No password set* <sup>1</sup>	
	Content Manager login	User name	—	
		Password	—	
Projector settings	Network standby	ON		
	Network control			
	WEB control	ON		
	Command control	—		
	WEB port / Command port	—		
	PJLink control	—		
	ECO management			
Standby mode	—			
Functions	Standby mode			
	Auto search (local network) function		×	
	Device status monitoring function (Simplified)		○	
	Device location information registering function (Map monitoring function)		○	
	Command transmission function		○	
	Simultaneous image distribution function		×	
	Distribution image deletion function		×	
	Interrupting delivery function		×	
	Brightness control function		×	
	ECO management function		×	
	Signage schedule acquisition and delivery functions		×	
	Maintenance log save function		×	
	Contents list delivery function		×	
	ECO Power Level Monitor Function		×	
	Wireless settings display function		×	
	Light ID control function		×	
	Remote Preview function		×	
	Early warning function (paid)	Status monitoring function (Details)		○
		Error, warning, and notification guidance displays function		○
		Basic control functions (power, Shutter / AV muting)		○
Fan failure prediction function		×		
Filter clog prediction		×		
Maintenance prediction function		○		
Temperature information graph display function		×		
Voltage information graph display function		×		
Display of WEB control screen for devices function		○		
System log acquisition (automatic acquisition only when error, warning, or notification occurs)		×		
Stopped camera image detecting function		○		

\*1: This is the setting provided at the time of shipment. Use the same password as for WEB control of the projector unit.

# PT-LZ370

The letters\* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

\* Alphabet letters at end (place of destination: E/EA/U/(blank))

Model group: **Rich information model**

○: Supported    ×: Not supported    —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards	Not used	
Connection to projector	IP address	Only fixed IP address supported	
	WEB control screen login	User name	admin1* <sup>1</sup>
		Password	panasonic* <sup>2</sup>
	Content Manager login	User name	—
Password		—	
Projector settings	Network standby	—	
	Network control	ON	
	WEB control	—	
	Command control	—	
	WEB port / Command port	—	
	PJLink control	—	
	ECO management		
Standby mode	—		
Standby mode	Normal		
Functions	Monitoring and control functions	Auto search (local network) function	×
		Device status monitoring function (Simplified)	○
		Device location information registering function (Map monitoring function)	○
		Command transmission function	○
		Simultaneous image distribution function	×
		Distribution image deletion function	×
		Interrupting delivery function	×
		Brightness control function	×
		ECO management function	○
		Signage schedule acquisition and delivery functions	×
		Maintenance log save function	○
		Contents list delivery function	×
		ECO Power Level Monitor Function	×
		Wireless settings display function	×
	Light ID control function	×	
	Remote Preview function	×	
	Early warning function (paid)	Status monitoring function (Details)	○
		Error, warning, and notification guidance displays function	○
		Basic control functions (power, Shutter / AV muting)	○
		Fan failure prediction function	×
		Filter clog prediction	×
		Maintenance prediction function	○
		Temperature information graph display function	○
Voltage information graph display function		×	
Display of WEB control screen for devices function		○	
System log acquisition (automatic acquisition only when error, warning, or notification occurs)		×	
Stopped camera image detecting function	○		

\*1: This is the user name provided at the time of shipment.

\*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

■ PT-LW375 / PT-LW335 / PT-LB425 / PT-LB385 / PT-LB355

■ PT-TW371R / PT-TW370 / PT-TX430 / PT-TX340

The letters\* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

\* Alphabet letters at end (place of destination: D/J/K/T/U/(blank))

Model group: **Basic information model**

○: Supported    ×: Not supported    —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards	Not used	
Connection to projector	IP address	Only fixed IP address supported	
	WEB control screen login	User name	admin
		Password	admin1* <sup>1</sup>
	Content Manager login	User name	—
		Password	—
Projector settings	Network standby	—	
	Network control		
	WEB control	—	
	Command control	—	
	WEB port / Command port	—	
	PJLink control	—	
	ECO management		
Standby mode	—		
	Standby mode	Normal	
Functions	Monitoring and control functions	Auto search (local network) function	×
		Device status monitoring function (Simplified)	○
		Device location information registering function (Map monitoring function)	○
		Command transmission function	×
		Simultaneous image distribution function	×
		Distribution image deletion function	×
		Interrupting delivery function	×
		Brightness control function	×
		ECO management function	×
		Signage schedule acquisition and delivery functions	×
		Maintenance log save function	×
		Contents list delivery function	×
		ECO Power Level Monitor Function	×
		Wireless settings display function	×
		Light ID control function	×
	Remote Preview function	×	
	Early warning function (paid)	Status monitoring function (Details)	○
		Error, warning, and notification guidance displays function	○
		Basic control functions (power, Shutter / AV muting)	○
		Fan failure prediction function	×
		Filter clog prediction	×
		Maintenance prediction function	×
		Temperature information graph display function	×
Voltage information graph display function		×	
Display of WEB control screen for devices function		○	
System log acquisition (automatic acquisition only when error, warning, or notification occurs)	×		
Stopped camera image detecting function	○		

\*1: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.



■ PT-LW373 / PT-LW333 / PT-LB423 / PT-LB383 / PT-LB353

■ PT-TW351R / PT-TW350 / PT-TX410 / PT-TX320

■ PT-LW362 / PT-LW312 / PT-LB412 / PT-LB382 / PT-LB332

The letters\* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

\* Alphabet letters at end (place of destination: D/J/(blank))

Model group: **Basic information model**

○: Supported    ×: Not supported    —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards	Not used	
Connection to projector	IP address	Only fixed IP address supported	
	WEB control screen login	User name	admin
		Password	admin1* <sup>1</sup>
	Content Manager login	User name	—
Password		—	
Projector settings	Network standby	—	
	Network control		
	WEB control	—	
	Command control	—	
	WEB port / Command port	—	
	PJLink control	—	
ECO management	Standby mode	—	
	Standby mode	Normal	
Functions	Monitoring and control functions	Auto search (local network) function	×
		Device status monitoring function (Simplified)	○
		Device location information registering function (Map monitoring function)	○
		Command transmission function	×
		Simultaneous image distribution function	×
		Distribution image deletion function	×
		Interrupting delivery function	×
		Brightness control function	×
		ECO management function	×
		Signage schedule acquisition and delivery functions	×
		Maintenance log save function	×
		Contents list delivery function	×
		ECO Power Level Monitor Function	×
		Wireless settings display function	×
	Light ID control function	×	
	Remote Preview function	×	
	Early warning function (paid)	Status monitoring function (Details)	○
		Error, warning, and notification guidance displays function	○
		Basic control functions (power, Shutter / AV muting)	○
		Fan failure prediction function	×
Filter clog prediction		×	
Maintenance prediction function		×	
Temperature information graph display function		×	
Voltage information graph display function		×	
Display of WEB control screen for devices function	○		
System log acquisition (automatic acquisition only when error, warning, or notification occurs)	×		
Stopped camera image detecting function	○		

\*1: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

■ PT-LW330\*2 / PT-LW280\*2 / PT-LB360\*2 / PT-LB330\*2

■ PT-TW343R / PT-TW342 / PT-TX402 / PT-TX312

■ PT-TW341R\*2 / PT-TW340\*2 / PT-TW250\*2 / PT-TX400\*2 / PT-TX310\*2

The letters\* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

\* Alphabet letters at end (place of destination: D/J/(blank))

Model group: **Basic information model**

○: Supported X: Not supported —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards	Not used	
Connection to projector	IP address	Only fixed IP address supported	
	WEB control screen login	User name	admin
		Password	admin1*1
	Content Manager login	User name	—
Password		—	
Projector settings	Network standby	—	
	Network control		
	WEB control	—	
	Command control	—	
	WEB port / Command port	—	
	PJLink control	—	
ECO management	Standby mode	—	
	Standby mode	Normal	
Functions	Monitoring and control functions	Auto search (local network) function	X
		Device status monitoring function (Simplified)	○
		Device location information registering function (Map monitoring function)	○
		Command transmission function	X
		Simultaneous image distribution function	X
		Distribution image deletion function	X
		Interrupting delivery function	X
		Brightness control function	X
		ECO management function	X
		Signage schedule acquisition and delivery functions	X
		Maintenance log save function	X
		Contents list delivery function	X
		ECO Power Level Monitor Function	X
		Wireless settings display function	X
	Light ID control function	X	
	Remote Preview function	X	
	Early warning function (paid)	Status monitoring function (Details)	○
		Error, warning, and notification guidance displays function	○
		Basic control functions (power, Shutter / AV muting)	○
		Fan failure prediction function	X
Filter clog prediction		X	
Maintenance prediction function		X	
Temperature information graph display function		X	
Voltage information graph display function		X	
Display of WEB control screen for devices function	○		
System log acquisition (automatic acquisition only when error, warning, or notification occurs)	X		
Stopped camera image detecting function	○		

\*1: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

\*2: Only devices with serial numbers that start with "B" or "DB53" are supported.

■ PT-LW25H / PT-LX30H / PT-LX26H

■ PT-TW231R / PT-TW230

The letters\* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

\* Alphabet letters at end (place of destination: E/EA/U/(blank))

Model group: **Rich information model**

○: Supported    ×: Not supported    —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards	Not used	
Connection to projector	IP address	Only fixed IP address supported	
	WEB control screen login	User name	admin1*1
		Password	panasonic*2
	Content Manager login	User name	—
Password		—	
Projector settings	Network standby	—	
	Network control	ON	
	WEB control	—	
	Command control	—	
	WEB port / Command port	—	
	PJLink control	—	
	ECO management	—	
Standby mode	—		
	Standby mode	Network	
Functions	Monitoring and control functions	Auto search (local network) function	×
		Device status monitoring function (Simplified)	○
		Device location information registering function (Map monitoring function)	○
		Command transmission function	○
		Simultaneous image distribution function	×
		Distribution image deletion function	×
		Interrupting delivery function	×
		Brightness control function	×
		ECO management function	×
		Signage schedule acquisition and delivery functions	×
		Maintenance log save function	○
		Contents list delivery function	×
		ECO Power Level Monitor Function	×
	Wireless settings display function	×	
	Light ID control function	×	
	Remote Preview function	×	
	Early warning function (paid)	Status monitoring function (Details)	○
		Error, warning, and notification guidance displays function	○
		Basic control functions (power, Shutter / AV muting)	○
		Fan failure prediction function	×
Filter clog prediction		×	
Maintenance prediction function		○	
Temperature information graph display function		○	
Voltage information graph display function		×	
Display of WEB control screen for devices function		○	
System log acquisition (automatic acquisition only when error, warning, or notification occurs)	×		
	Stopped camera image detecting function	○	

\*1: This is the user name provided at the time of shipment.

\*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

# PT-LB90NT

The letters\* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

\* Alphabet letters at end (place of destination: E/EA/U/(blank))

Model group: **Rich information model**

○: Supported    ×: Not supported    —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards	Not used	
Connection to projector	IP address	Only fixed IP address supported	
	WEB control screen login	User name	admin1*1
		Password	panasonic*2
	Content Manager login	User name	—
Password		—	
Projector settings	Network standby	—	
	Network control	ON	
	WEB control	—	
	Command control	—	
	WEB port / Command port	—	
	PJLink control	—	
	ECO management		
Standby mode	—		
Standby mode	Normal		
Functions	Monitoring and control functions	Auto search (local network) function	○
		Device status monitoring function (Simplified)	○
		Device location information registering function (Map monitoring function)	○
		Command transmission function	○
		Simultaneous image distribution function	○
		Distribution image deletion function	○
		Interrupting delivery function	×
		Brightness control function	×
		ECO management function	×
		Signage schedule acquisition and delivery functions	×
		Maintenance log save function	○
		Contents list delivery function	×
		ECO Power Level Monitor Function	×
		Wireless settings display function	×
	Light ID control function	×	
	Remote Preview function	×	
	Early warning function (paid)	Status monitoring function (Details)	○
		Error, warning, and notification guidance displays function	○
		Basic control functions (power, Shutter / AV muting)	○
		Fan failure prediction function	×
		Filter clog prediction	×
		Maintenance prediction function	○
		Temperature information graph display function	○
Voltage information graph display function		×	
Display of WEB control screen for devices function		○	
System log acquisition (automatic acquisition only when error, warning, or notification occurs)	×		
Stopped camera image detecting function	○		

\*1: This is the user name provided at the time of shipment.

\*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

# PT-LB3 / PT-LB2V / PT-LB2 / PT-LB1V / PT-LB1 / PT-ST10

The letters\* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

\* Alphabet letters at end (place of destination: E/EA/U/(blank))

Model group: **Rich information model**

○: Supported    ×: Not supported    —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards	Not used	
Connection to projector	IP address	Only fixed IP address supported	
	WEB control screen login	User name	admin1* <sup>1</sup>
		Password	panasonic* <sup>2</sup>
	Content Manager login	User name	—
Password		—	
Projector settings	Network standby	—	
	Network control	ON	
	WEB control	—	
	Command control	—	
	WEB port / Command port	—	
	PJLink control	—	
	ECO management		
Standby mode	—		
	Standby mode	Normal	
Functions	Monitoring and control functions	Auto search (local network) function	×
		Device status monitoring function (Simplified)	○
		Device location information registering function (Map monitoring function)	○
		Command transmission function	○
		Simultaneous image distribution function	×
		Distribution image deletion function	×
		Interrupting delivery function	×
		Brightness control function	×
		ECO management function	×
		Signage schedule acquisition and delivery functions	×
		Maintenance log save function	○
		Contents list delivery function	×
		ECO Power Level Monitor Function	×
		Wireless settings display function	×
	Light ID control function	×	
	Remote Preview function	×	
	Early warning function (paid)	Status monitoring function (Details)	○
		Error, warning, and notification guidance displays function	○
		Basic control functions (power, Shutter / AV muting)	○
		Fan failure prediction function	×
		Filter clog prediction	×
		Maintenance prediction function	○
		Temperature information graph display function	○
Voltage information graph display function		×	
Display of WEB control screen for devices function		○	
System log acquisition (automatic acquisition only when error, warning, or notification occurs)		×	
Stopped camera image detecting function	○		

\*1: This is the user name provided at the time of shipment.

\*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

# NTN91003 / NTN91002

# PT-JX200F / PT-JX200G / PT-JX200H

The letters\* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

\* Alphabet letters at end (place of destination: D/E/K/T/U, cabinet color: B/W)

Model group: **Rich information model**

○: Supported    ×: Not supported    —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards	Not used	
Connection to projector	IP address	Only fixed IP address supported	
	WEB control screen login	User name	admin1*1
		Password	panasonic*2
	Content Manager login	User name	admin1*1
Password		panasonic*3	
Projector settings	Network standby	—	
	Network control		
	WEB control	ON	
	Command control	—	
	WEB port / Command port	—	
	PJLink control	ON	
	ECO management		
Standby mode	—		
Standby mode		Normal*4	
Functions	Monitoring and control functions	Auto search (local network) function	○
		Device status monitoring function (Simplified)	○
		Device location information registering function (Map monitoring function)	○
		Command transmission function	○
		Simultaneous image distribution function	○
		Distribution image deletion function	○
		Interrupting delivery function	○
		Brightness control function	×
		ECO management function	○
		Signage schedule acquisition and delivery functions	○
		Maintenance log save function	○
		Contents list delivery function	×
		ECO Power Level Monitor Function	×
		Wireless settings display function	○
	Light ID control function	×	
	Remote Preview function	×	
	Early warning function (paid)	Status monitoring function (Details)	○
		Error, warning, and notification guidance displays function	○
		Basic control functions (power, Shutter / AV muting)	○
		Fan failure prediction function	○
		Filter clog prediction	×
		Maintenance prediction function	○
		Temperature information graph display function	○
Voltage information graph display function		×	
Display of WEB control screen for devices function		○	
System log acquisition (automatic acquisition only when error, warning, or notification occurs)	○		
Stopped camera image detecting function	○		

\*1: This is the user name provided at the time of shipment.

\*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

\*3: This is the password provided at the time of shipment. Use the same password as for Content Manager supplied with the projector.

\*4: When set to "Network" or "ECO", information acquisition and control will be disabled.

# NTN91001 / NTN91000

# PT-JW130F / PT-JW130G / PT-JW130H

The letters\* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

\* Alphabet letters at end (place of destination: D/E/K/T/U, cabinet color: B/W)

Model group: **Rich information model**

○: Supported    ×: Not supported    —: Not available

		Setting / compatibility	
Optional accessories	Expansion boards	Not used	
Connection to projector	IP address	Only fixed IP address supported	
	WEB control screen login	User name	admin1* <sup>1</sup>
		Password	panasonic* <sup>2</sup>
	Content Manager login	User name	admin1* <sup>1</sup>
Password		panasonic* <sup>3</sup>	
Projector settings	Network standby	—	
	Network control		
	WEB control	ON	
	Command control	—	
	WEB port / Command port	—	
	PJLink control	ON	
	ECO management		
Standby mode	—		
Standby mode		Normal* <sup>4</sup>	
Functions	Monitoring and control functions		
	Auto search (local network) function	○	
	Device status monitoring function (Simplified)	○	
	Device location information registering function (Map monitoring function)	○	
	Command transmission function	○	
	Simultaneous image distribution function	○	
	Distribution image deletion function	○	
	Interrupting delivery function	○	
	Brightness control function	×	
	ECO management function	○	
	Signage schedule acquisition and delivery functions	○	
	Maintenance log save function	×	
	Contents list delivery function	×	
	ECO Power Level Monitor Function	×	
	Wireless settings display function	○	
	Light ID control function	×	
	Remote Preview function	×	
	Early warning function (paid)		
	Status monitoring function (Details)	○	
	Error, warning, and notification guidance displays function	○	
	Basic control functions (power, Shutter / AV muting)	○	
	Fan failure prediction function	○	
	Filter clog prediction	×	
Maintenance prediction function	○		
Temperature information graph display function	○		
Voltage information graph display function	×		
Display of WEB control screen for devices function	○		
System log acquisition (automatic acquisition only when error, warning, or notification occurs)	×		
Stopped camera image detecting function	○		

\*1: This is the user name provided at the time of shipment.

\*2: This is the password provided at the time of shipment. Use the same password as for WEB control of the projector unit.

\*3: This is the password provided at the time of shipment. Use the same password as for Content Manager supplied with the projector.

\*4: When set to "Network" or "ECO", information acquisition and control will be disabled.

## ET-YFB200

The letters\* that appear at the end of the above model numbers are omitted, as they are not relevant to feature availability.

\* Alphabet letters at end (place of destination: G/(blank))

○: Supported    ×: Not supported    —: Not available

		Setting / compatibility
Connection to DIGITAL LINK Switcher	IP address	Only fixed IP address supported
	User name	admin1*1
	Password	panasonic*2
DIGITAL LINK Switcher settings	Network standby	—
	Network control	—
	WEB control	ON
	WEB port / Command port	1024
	PJLink control	ON
Functions	DIGITAL LINK Switcher I/O status display	○
	Fan status display	○
	WEB control screen display	×

\*1: This is the user name provided at the time of shipment. Connect using a user with administrator privileges.

\*2: This is the password provided at the time of shipment. The password is identical to that used for WEB control of the DIGITAL LINK switcher unit.