

PRO PTZ CONTROL CENTER SOFTWARE KEYBOARD SHORTCUTS

CAMERA PRESETS

KEY	FUNCTION
F1	Preset 1
F2	Preset 2
F3	Preset 3
F4	Preset 4
F5	Preset 5
F6	Preset 6
F7	Preset 7
F8	Preset 8
F9	Preset 9

CAMERA PAN / TILT CONTROL

KEY	FUNCTION
↑	Tilt Up
↓	Tilt Down
←	Pan Left
→	Pan Right
↑ + →	Diagonal Up / Right
→ + ↓	Diagonal Down / Right
↓ + ←	Diagonal Up / Left
← + ↑	Diagonal Down / Left
Shift + ↑	Fast Tilt Up
Shift + ↓	Fast Tilt Down
Shift + ←	Fast Left Pan
Shift + →	Fast Right Pan
Shift + ↑ + →	Fast Diagonal Up / Right
Shift + → + ↓	Fast Diagonal Down / Right
Shift + ↓ + ←	Fast Diagonal Up / Left
Shift + ← + ↑	Fast Diagonal Down / Left
Ctrl + ↑	Slow Tilt Up
Ctrl + ↓	Slow Tilt Down
Ctrl + ←	Slow Left Pan
Ctrl + →	Slow Right Pan
Ctrl + ↑ + →	Slow Diagonal Up / Right
Ctrl + → + ↓	Slow Diagonal Down / Right
Ctrl + ↓ + ←	Slow Diagonal Up / Left
Ctrl + ← + ↑	Slow Diagonal Down / Left

CAMERA ZOOM CONTROL

KEY	FUNCTION
Z	Zoom In (Tele)
X	Zoom Out (Wide)
Shift + Z	Fast Zoom In (Tele)
Shift + X	Fast Zoom Out (Wide)
Ctrl + Z	Slow Zoom In (Tele)
Ctrl + X	Slow Zoom Out

CAMERA SELECTION

KEY	FUNCTION
Alt + ↑	Switch Selected Camera to Next One Up
Alt + →	Switch Selected Camera to Next One to the Right
Alt + ↓	Switch Selected Camera to Next One Down
Alt + ←	Switch Selected Camera to Next One to the Left
PAGE UP	Switch Camera Page (next)
PAGE DOWN	Switch Camera Page (back)

CAMERA ZOOM CONTROL (NUMPAD)

KEY	FUNCTION
-	Zoom In (Tele)
+	Zoom Out (Wide)
Shift + -	Fast Zoom In (Tele)
Shift + +	Fast Zoom Out (Wide)
Ctrl + -	Slow Zoom In (Tele)
Ctrl + +	Slow Zoom Out